

# User's Manual

## FlexScan<sup>®</sup> EV2313W EV2333W

Color LCD Monitor

### Important


Please read PRECAUTIONS, this User's Manual and Setup Guide (separate volumes) carefully to familiarize yourself with safe and effective usage.

- 
- Please read to the Setup Guide for basic information ranging from connection of the monitor to a PC to using the monitor.
  - The latest User's Manual is available for download from our site:  
<http://www.eizo.com>
- 



## [Location of Caution Statement]

Ex. FlexStand

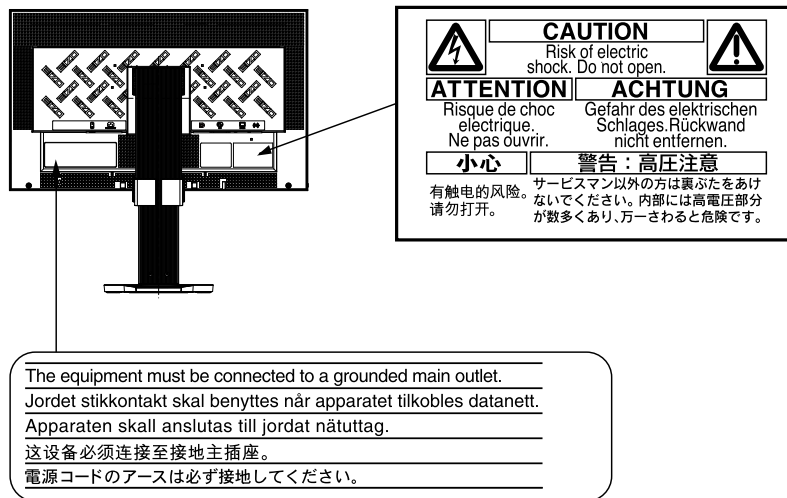

As an ENERGY STAR® Partner, EIZO NANA O CORPORATION has determined that this product meets the ENERGY STAR guidelines for energy efficiency.



This product has acquired TCO standard that relates to safety, ergonomics, environment and so forth of office equipment. For overview of the TCO, refer to our website.

<http://www.eizo.com>

Product specification may vary with sales areas.

Confirm the specification in the manual written in language of the region of purchase.

---

Copyright© 2009-2010 EIZO NANA O CORPORATION All rights reserved.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of EIZO NANA O CORPORATION.

EIZO NANA O CORPORATION is under no obligation to hold any submitted material or information confidential unless prior arrangements are made pursuant to EIZO NANA O CORPORATION's receipt of said information.

Although every effort has been made to ensure that this manual provides up-to-date information, please note that EIZO monitor specifications are subject to change without notice.

---

Apple and Macintosh are registered trademarks of Apple Inc.

ENERGY STAR is a U.S. registered trademark of the United States Environmental Protection Agency.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

DisplayPort icon and VESA are registered trademarks or trademarks of Video Electronics Standards Association in the United States and other countries.

EIZO ScreenSlicer is a trademark of EIZO NANA O CORPORATION. EIZO, EIZO Logo, FlexScan and

ScreenManager are registered trademarks of EIZO NANA O CORPORATION in Japan and other countries.

All other trademarks are the properties of their respective owners.



## Notice for this monitor

---

This product is suited to creating documents, viewing multimedia content, and other general purposes.

---

This product has been adjusted specifically for use in the region to which it was originally shipped. If the product is used outside the region, it may not operate as specified in the specifications.

---

This product may not be covered by warranty for uses other than those described in this manual.

---

The specifications noted in this manual are only applicable for power cords and signal cables specified by us.

---

Use optional products manufactured or specified by us with this product.

---

As it takes about 30 minutes for the performance of electrical parts to stabilize, adjust the monitor 30 minutes or more after the monitor power has been turned on.

---

In order to suppress the luminosity change by long-term use and to maintain the stable luminosity, use of a monitor in lower brightness is recommended.

---

When the screen image is changed after displaying the same image for extended periods of time, an afterimage may appear. Use the screen saver or power save function to avoid displaying the same image for extended periods of time.

---

Periodic cleaning is recommended to keep the monitor looking new and to prolong its operation lifetime.  
(Refer to “[Cleaning](#)” on the next page.)

---

The LCD panel is manufactured using high-precision technology. However, missing pixels or lit pixels may appear on the LCD panel, this is not malfunction.

Percentage of effective pixels : 99.9994% or higher.

---

The backlight of the LCD panel has a fixed life span. When the screen becomes dark or begins to flicker, please contact your dealer.

---

Do not press on the panel or edge of the frame strongly, as this may result in the display malfunction, such as the interference patterns, etc. If pressure is continually applied to the LCD panel, it may deteriorate or damage your LCD panel. (If the pressure marks remain on the LCD panel, leave the monitor with a white or black screen. The symptom may disappear.)

---

Do not scratch or press on the panel with any sharp objects, such as a pencil or pen as this may result in damage to the panel. Do not attempt to brush with tissues as this may scratch the LCD panel.

---

When the monitor is cold and brought into a room or the room temperature goes up quickly, dew condensation may occur inside and outside the monitor. In that case, do not turn the monitor on and wait until dew condensation disappears, otherwise it may cause some damages to the monitor.

---

---

## Cleaning

---

### Attention

- Never use any solvents or chemicals, such as thinner, benzene, wax, alcohol, and abrasive cleaner, which may damage the cabinet or LCD panel.
- 

### NOTE

- Optional ScreenCleaner is recommended for cleaning the panel surface.
- 

### [LCD Panel]

- Clean the LCD panel with a soft cloth such as cotton cloth or lens cleaning paper.
- Remove persistent stains gently with a cloth dampened with a little water, and then clean the LCD panel again with a dry cloth for better finishing.

### [Cabinet]

Clean the cabinet with a soft cloth dampened with a little mild detergent.

## To use the monitor comfortably

---

- An excessively dark or bright screen may affect your eyes. Adjust the brightness of the monitor according to the environmental conditions.
- Staring at the monitor for a long time tires your eyes. Take a 10-minute rest every hour.

# CONTENTS

<b>Cover</b> .....	<b>1</b>	<b>2-8 Turning off the monitor automatically [Off Timer]</b> .....	<b>24</b>
Notice for this monitor .....	3	<b>2-9 Setting On/Off for the automatic brightness adjustment function [Auto EcoView]</b> .....	<b>24</b>
<b>CONTENTS</b> .....	<b>5</b>	<b>2-10 Shifting to the power saving mode when a person leaves the monitor [EcoView Sense]</b> .....	<b>25</b>
<b>Chapter 1 Features and Overview</b> .....	<b>7</b>	• To set EcoView Sense On/Off .....	25
<b>1-1 Features</b> .....	<b>7</b>	• To change the detection level .....	25
<b>1-2 Controls and Functions</b> .....	<b>9</b>	<b>2-11 Setting On/Off for the power saving level indicator [EcoView Index]</b> .....	<b>26</b>
<b>1-3 Compatible Resolutions/Frequencies</b> .....	<b>10</b>	<b>2-12 Screen Size Selection</b> .....	<b>26</b>
<b>1-4 Functions and Basic Operation</b> .....	<b>11</b>	• To change screen size [Screen Size] .....	26
<b>Chapter 2 Settings and Adjustments</b> .....	<b>15</b>	• To adjust brightness of non-display area [Border Intensity] .....	27
<b>2-1 Utility Disk</b> .....	<b>15</b>	<b>2-13 Setting Adjustment Menu Display</b> .....	<b>27</b>
• Disk contents and software overview .....	15	• To update menu settings [Menu Size/Menu Position/Menu Off Timer/Translucent] .....	27
• To use “ScreenManager Pro for LCD (DDC/CI)/EIZO ScreenSlicer” .....	15	<b>2-14 Setting Orientation</b> .....	<b>28</b>
<b>2-2 Screen Adjustment</b> .....	<b>16</b>	• To set the orientation of the Adjustment menu [Orientation] .....	28
<b>Digital Input</b> .....	<b>16</b>	<b>2-15 Locking Buttons</b> .....	<b>28</b>
<b>Analog Input</b> .....	<b>16</b>	<b>2-16 Displaying Monitor Information [Information]</b> .....	<b>29</b>
<b>2-3 Color Adjustment</b> .....	<b>19</b>	<b>2-17 Enabling/Disabling DDC/CI communication</b> .....	<b>29</b>
• To select the display mode (FineContrast mode) .....	19	<b>2-18 Setting Power Indicator ON/OFF [Power Indicator]</b> .....	<b>29</b>
• To perform advanced adjustments .....	20	<b>2-19 Setting Language [Language]</b> .....	<b>29</b>
• Adjustment items in each mode .....	20	<b>2-20 Setting EIZO logo display ON/OFF</b> .....	<b>30</b>
• To adjust the brightness [Brightness] .....	20	<b>2-21 Resuming the Default Setting [Reset]</b> .....	<b>30</b>
• To adjust the contrast [Contrast] .....	21	• To reset color adjustment values .....	30
• To adjust the color temperature [Temperature] .....	21	• To reset all adjustments to the factory default settings .....	30
• To adjust the gamma value [Gamma] .....	21	<b>Chapter 3 Connecting Cables</b> .....	<b>31</b>
• To adjust the color saturation [Saturation] .....	22	<b>3-1 Connecting More than Two PCs to the Monitor</b> .....	<b>31</b>
• To adjust the hue [Hue] .....	22	• To switch the input signal .....	32
• To adjust the gain value [Gain] .....	22	• To set input signal selection [Input Signal] .....	32
• To set the Overdrive intensity [Overdrive] .....	22		
<b>2-4 Adjusting Volume [Volume]</b> .....	<b>23</b>		
<b>2-5 Switching sound source during DisplayPort signal input [Source]</b> .....	<b>23</b>		
<b>2-6 Turning off the audio output at Power Saving mode [Power Save]</b> .....	<b>23</b>		
<b>2-7 Setting On/Off for Power Saving mode [Power Save]</b> .....	<b>23</b>		

# CONTENTS

---

<b>Chapter 4 Troubleshooting.....</b>	<b>33</b>
<b>Chapter 5 Reference .....</b>	<b>36</b>
5-1 How to Attach the Optional Arm.....	36
5-2 Attaching the FlexStand.....	38
5-3 Attaching the TriStand .....	39
5-4 Folding the TriStand .....	40
5-5 Specifications .....	42
5-6 Glossary .....	48
5-7 Preset Timing .....	50
<b>FCC Declaration of Conformity .....</b>	<b>51</b>
<b>Hinweise zur Auswahl des richtigen Schwenkarms für Ihren Monitor.....</b>	<b>52</b>
<b>Hinweis zur Ergonomie.....</b>	<b>52</b>

# Chapter 1 Features and Overview

Thank you very much for choosing an EIZO color LCD monitor.

## 1-1 Features

- 23" wide format LCD

- Applicable to the resolution of 1920 × 1080

- Power saving function

Suppressing the power consumption\*1 reduces the carbon dioxide emissions.

This product is equipped with various power saving functions.

- Power Consumption when main power switch is Off: 0W

Equipped with main power switch.

Turning off the main power switch completely shuts off power supply to the monitor while the monitor is not used.

- Standby power: 0.1W or less

Standby power when Power button is Off: 0.1W or less.

- LED backlight LCD panel (EV2313W only)

The LED backlight provides better power efficiency and reduced power consumption\*1 compared to existing fluorescent backlight LCD panels.

No mercury, a hazardous substance, is used.

- Auto EcoView function

The sensor on the front side of the monitor detects the environmental brightness to adjust the screen brightness automatically and comfortably.

Excessively high brightness may lead a damage to the natural environment as well as to your eyes. Suppressing the excessively high brightness will be helpful to reduce the power consumption and the damage to your eyes.

2-9 "Setting On/Off for the automatic brightness adjustment function [Auto EcoView]" (page 24)

- EcoView Sense function

The sensor on the front side of the monitor detects the movement of a person. When a person moves away from the monitor, it shifts to the power saving mode automatically and does not display the images on the screen. Therefore, the function reduces the power consumption.

2-10 "Shifting to the power saving mode when a person leaves the monitor [EcoView Sense]" (page 25)

- EcoView Index function

The green indicator shows the power consumption ratio responding to the brightness of the monitor. You can realize the power consumption reduction by taking consideration in the ratio of power saving.

2-11 "Setting On/Off for the power saving level indicator [EcoView Index]" (page 26)

- Brightness stabilization through dimming control

Supports brightness adjustments over a wide range (EV2313W: 2-100%, EV2333W: 20-100%).

Even when lowering brightness to its minimum value, a stable and accurate image will be maintained. Even during use in an extremely dark place, the brightness can be adjusted to a level which is gentle and comfortable to the eye.

- FineContrast function

2-3 "To select the display mode (FineContrast mode)" (page 19)

- Applicable to DisplayPort (applicable to 8 bit)\*2

The image signal and audio signal can both be transmitted via a single DisplayPort cable (option).

- Portrait/Landscape display available

- The software "ScreenManager Pro for LCD (DDC/CI)" to adjust the screen using the mouse and keyboard is included

2-1 "Utility Disk" (page 15)

- HDCP (High-bandwidth Digital Content Interface)

- Built-in speakers and headphone jack

1-2 "Controls and Functions" (page 9)

- Overdrive function

2-3 "To set the Overdrive intensity [Overdrive]" (page 22)

\*1 Reference values:

– EV2313W

Maximum power consumption: 32W (Luminance Max., at default settings)

Standard power consumption: 16W (100VAC, Luminance 120cd/m<sup>2</sup>, at default settings)

Standard power consumption: 16W (200VAC, Luminance 120cd/m<sup>2</sup>, at default settings)

– EV2333W

Maximum power consumption: 42W (Luminance Max., at default settings)

Standard power consumption: 25W (100VAC, Luminance 120cd/m<sup>2</sup>, at default settings)

Standard power consumption: 24W (200VAC, Luminance 120cd/m<sup>2</sup>, at default settings)

\*2 When transmitting an audio signal using the DisplayPort cable, the graphics board must be compatible with audio output. (“5-5 Specifications” on [page 42](#))


**NOTE**

- This monitor supports the Portrait/Landscape display. This function allows you to change the orientation of the Adjustment menu when using the monitor screen in vertical display position. (Refer to “To set the orientation of the Adjustment menu [Orientation]” on [page 28](#).)
- For using the monitor with “Portrait” position, the graphics board supporting portrait display is required. When placing the monitor in a "Portrait" position, settings of your graphics board need to be changed. Refer to the manual of the graphics board for details.
- An optional arm (or an optional stand) can be attached by removing the stand section. (Refer to “5-1 How to Attach the Optional Arm” on [page 36](#).)



# 1-2 Controls and Functions

Ex. FlexStand

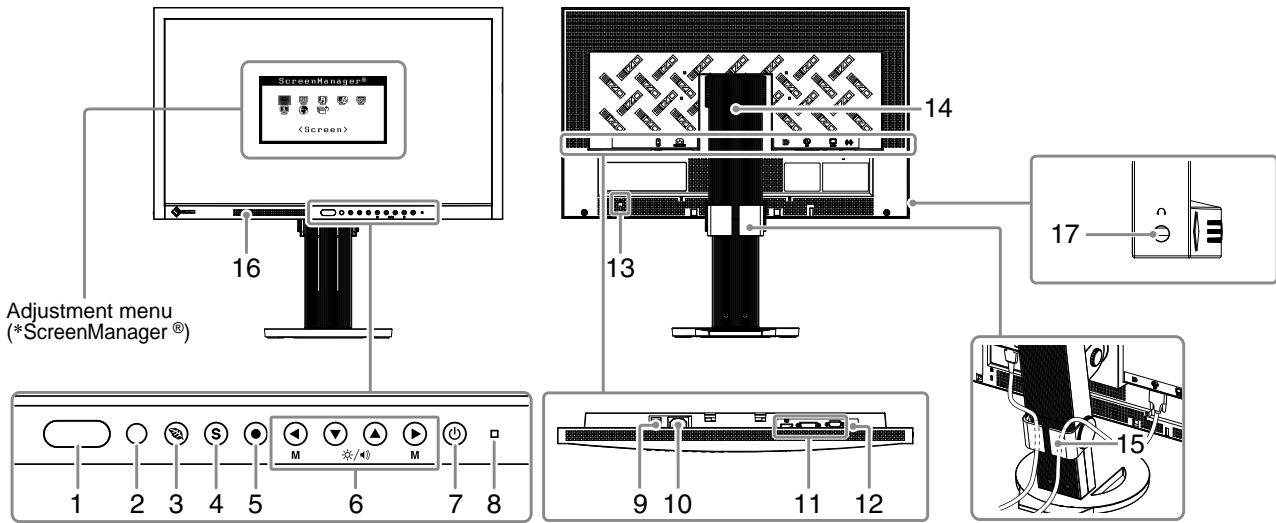

1	<b>EcoView Sense sensor</b>	Detects the movement of a person in front of the monitor. EcoView Sense function ( <a href="#">page 25</a> ).
2	<b>Auto EcoView sensor</b>	Detects ambient brightness. Auto EcoView function ( <a href="#">page 24</a> ).
3	<b>EcoView button</b>	Displays the setting menu of the power saving function (Auto EcoView, EcoView Sense and EcoView Index) ( <a href="#">page 24, 25, 26</a> ).
4	<b>Input Signal Selection button</b>	Switches input signals for display when more than two PCs are connected to the monitor ( <a href="#">page 32</a> ).
5	<b>Enter button</b>	Displays the Adjustment menu, determines an item on the menu screen, and saves values adjusted ( <a href="#">page 14</a> ).
6	<b>Control buttons (Left, Down, Up, Right)</b>	<ul style="list-style-type: none"> <li>• Chooses an adjustment item or increases/decreases adjusted values for advanced adjustments using the Adjustment menu (<a href="#">page 14</a>).</li> <li>• ◀ or ▶ button: Switches the display mode (<a href="#">page 19</a>).</li> <li>• ▲ or ▼ button: Displays the adjustment menu of the brightness and volume (<a href="#">page 11</a>).</li> </ul>
7	<b>Power button</b>	Turns the power on or off.
8	<b>Power indicator</b>	Indicates monitor's operation status. Blue: Operating      Orange: Power saving      Off: Power off
9	<b>Main Power Switch</b>	Turns the main power on or off.
10	<b>Power connector</b>	Connects the power cord.
11	<b>Input signal connectors</b>	Left : DisplayPort Connector / Center : DVI-D Connector / Right : D-Sub mini 15-pin connector
12	<b>Stereo mini jack</b>	Connects the stereo mini jack cable.
13	<b>Security lock slot</b>	Complies with Kensington's MicroSaver security system.
14	<b>Stand</b>	Used to adjust the height and angle of the monitor screen.
15	<b>Cable holder</b>	Covers the monitor cables.
16	<b>Speaker</b>	Outputs audio source.
17	<b>Headphone jack</b>	Connects the headphones.

\* ScreenManager® is an EIZO's nickname of the Adjustment menu. See [page 11](#) for how to use.

## 1-3 Compatible Resolutions/Frequencies

The monitor supports the following resolutions.

### Analog Input (D-Sub)

Resolution	Frequency	Dot Clock
640 × 480 (VGA, VESA)	~75 Hz	148.5 MHz (Max.)
720 × 400 (VGA TEXT)	70 Hz	
800 × 600 (VESA)	~75 Hz	
1024 × 768 (VESA)	~75 Hz	
1152 × 864 (VESA)	75 Hz	
1280 × 960 (VESA)	60 Hz	
1280 × 1024 (VESA)	~75 Hz	
1280 × 720 (CEA-861)	60 Hz	
1680 × 1050 (VESA CVT, VESA CVT RB)	60 Hz	
* 1920 × 1080 (CEA-861)	60 Hz	

### Digital Input (DVI-D)

Resolution	Frequency	Dot Clock
640 × 480 (VGA)	60 Hz	148.5 MHz (Max.)
720 × 400 (VGA TEXT)	70 Hz	
800 × 600 (VESA)	60 Hz	
1024 × 768 (VESA)	60 Hz	
1280 × 960 (VESA)	60 Hz	
1280 × 1024 (VESA)	60 Hz	
1280 × 720 (CEA-861)	60 Hz	
1680 × 1050 (VESA CVT, VESA CVT RB)	60 Hz	
* 1920 × 1080 (CEA-861)	60 Hz	

### Digital Input (DisplayPort)

Resolution	Frequency	Dot Clock
640 × 480 (VGA, CEA)	60 Hz	148.5 MHz (Max.)
720 × 400 (VGA TEXT)	70 Hz	
720 × 480 (4:3) (CEA)	60 Hz	
720 × 480 (16:9) (CEA)	60 Hz	
800 × 600 (VESA)	60 Hz	
1024 × 768 (VESA)	60 Hz	
1280 × 960 (VESA)	60 Hz	
1280 × 1024 (VESA)	60 Hz	
1280 × 720 (CEA-861, CEA)	60 Hz	
1680 × 1050 (VESA CVT, VESA CVT RB)	60 Hz	
* 1920 × 1080 (CEA-861)	60 Hz	

A graphics board in conformance with VESA standard and CEA-861 standard is required.


\* Recommended resolution (Set this resolution)

# 1-4 Functions and Basic Operation

## To adjust the screen and color

● Main menu (Refer to [page 14](#) for operation)

[At analog signal input]

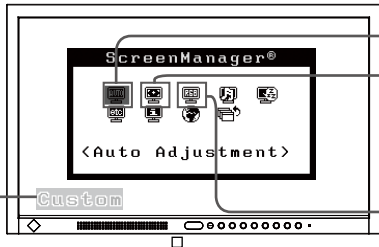

[At digital signal input]



• The Adjustment menu and the FineContrast mode name cannot be displayed at the same time.

◀ ▶ FineContrast mode

**Color Adjustment** Page 19

**Simple Adjustment [FineContrast mode]**

This function allows easy selection of a desired mode from five modes according to monitor application.

▼ ▲ Brightness and volume direct menu

**Brightness and Volume Adjustment**

Press ▼ or ▲ to display the adjustment menu.

Brightness: Press ◀ or ▶ .

Volume : Press ▼ or ▲ .

Analog input only

**1 Screen Adjustment (Automatic Adjustment)** Page 16

Auto Adjustment

- To adjust flickering and position  
[Screen]..... see [page 16](#)
- To adjust color gradation automatically  
[Range] ..... see [page 18](#)



**2 Screen Adjustment (Advanced Adjustment)** Page 17

[At analog signal input]

Screen

- To eliminate vertical bars [Clock\*] ... see [page 17](#)
- To remove flickering or blurring  
[Phase\*]..... see [page 17](#)
- To correct screen position  
[Position\*] ..... see [page 18](#)
- To modify blurred characters/lines  
[Smoothing] ..... see [page 18](#)

[At digital signal input]

Screen

\* Items marked with \* can be adjusted with analog input.

**Color Adjustment** Page 20

**Advanced Adjustment**

Color(Custom)

- “Brightness”, “Contrast”, “Temperature”, “Gamma”, “Saturation”, “Hue”, “Gain” and “Overdrive” can be set for each mode (Custom/sRGB/Text/Picture/Movie). Settable functions vary with the FineContrast mode.


**Resuming the default settings**

- To reset color adjustment values  
[Reset] ..... see [page 30](#)

## To use the monitor with low power consumption

- Main menu (Refer to [page 14](#) for operation)

### [At analog signal input]

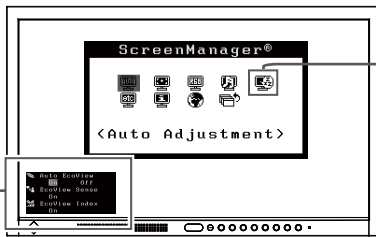

### [At digital signal input]



### Power-save Settings



- Setting On/Off for Power Saving mode [Power Save] .....see [page 23](#)
- Turning off the monitor automatically [Off Timer] .....see [page 24](#)
- Shifting to the power saving mode when a person leaves the monitor [EcoView Sense] .....see [page 25](#)

- The Adjustment menu and the EcoView menu cannot be displayed at the same time.
- EcoView menu is temporarily displayed when the power of the monitor is turned on.

### EcoView menu


#### Setting On/Off for the EcoView function

[Page 24](#)

#### (power saving function)

This monitor is equipped with the EcoView function for power saving.

Press to display the setting menu.

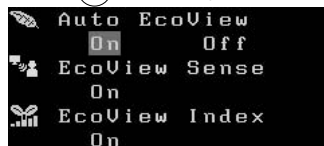

Choose the item with or (you can also choose it with ).


Change "On" and "Off" with or .

- Setting On/Off for the automatic brightness adjustment function [Auto EcoView] .....see [page 24](#)
- Shifting to the power saving mode when a person leaves the monitor [EcoView Sense] .....see [page 25](#)
- Setting On/Off for the power saving level indicator [EcoView Index] .....see [page 26](#)


# To make useful settings/adjustments

● Adjustment menu (Refer to [page 14](#) for operation)

[At analog signal input]

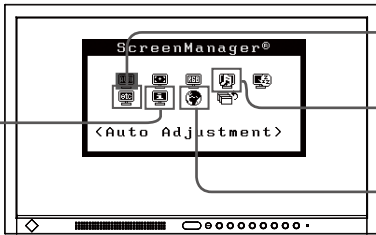


[At digital signal input]

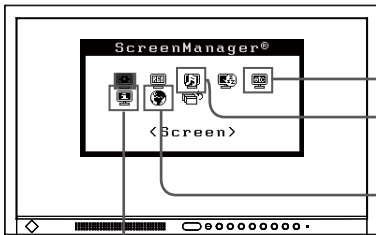

## Information

Page 29

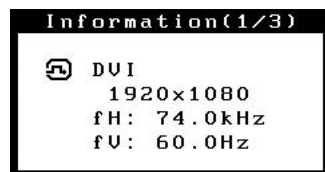

- Displaying Monitor Information [Information]

## Language

Page 29



- Setting Language [Language]

- Locking Buttons ..... see [page 28](#)
- Enabling/Disabling DDC/CI communication ..... see [page 29](#)
- Setting EIZO logo display ON/OFF ... see [page 30](#)

## Other Settings





- To change screen size [Screen Size] ..... see [page 26](#)
- To adjust brightness of non-display area [Border Intensity] ..... see [page 27](#)
- To set input signal selection [Input Signal] ..... see [page 32](#)
- To update menu settings [Menu Size/Menu Position/Menu Off Timer/Translucent] ..... see [page 27](#)
- To set the orientation of the Adjustment menu [Orientation] ..... see [page 28](#)
- Setting Power Indicator ON/OFF [Power Indicator] ..... see [page 29](#)
- To reset all adjustments to the factory default settings [Reset] ..... see [page 30](#)

## Sound Settings

[At D-Sub/DVI-D signal input]

[At DisplayPort signal input]

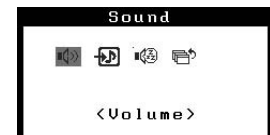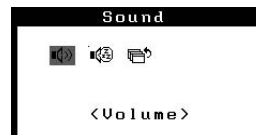



 







 





- Adjusting Volume [Volume]..... see [page 23](#)
- Switching sound source during DisplayPort signal input [Source\*] ..... see [page 23](#)
- Turning off the audio output at Power Saving mode [Power Save]..... see [page 23](#)



\* An item marked with \* can be adjusted with DisplayPort input.

## Basic operation of Adjustment menu

 

### [Displaying Adjustment menu and selecting function]

- (1) Press . The Main menu appears.
- (2) Select a function with  /  /  / , and press . The Sub menu appears.
- (3) Select a function with  /  /  / , and press . The adjustment/setting menu appears.
- (4) Adjust the selected item with  /  /  / , and press . The setting is saved.

### [Exiting Adjustment menu]

- (1) Choose <Return> from the Sub menu and press . The Main menu appears.
- (2) Choose <Exit> from the Main menu and press . The Adjustment menu quits.

#### NOTE

- The Adjustment menu can also be exited by pressing  twice quickly.
- <Exit> or <Return> can also be selected by pressing  twice in the Main menu or Sub menu.

# Chapter 2 Settings and Adjustments

## 2-1 Utility Disk

An “EIZO LCD Utility Disk” (CD-ROM) is supplied with the monitor. The following table shows the disk contents and the overview of the software programs.

- **Disk contents and software overview**

The disk includes software programs for adjustment, and User's Manual. Refer to “Readme.txt” file on the disk for software startup procedures or file access procedures.

Item	Overview	Windows	Macintosh
A “Readme.txt” file		√	√
Screen adjustment pattern files	Used when adjusting the image of the analog signal input manually.	√	√
ScreenManager Pro for LCD (DDC/CI)	A software for adjusting the screen using the mouse and keyboard.	√	—
EIZO ScreenSlicer	A software that divides a screen and lays out multiple windows efficiently.	√	—
User’s Manual of this monitor (PDF file)		√	√

- **To use “ScreenManager Pro for LCD (DDC/CI)/ EIZO ScreenSlicer”**

For the installation and use of “ScreenManager Pro for LCD (DDC/CI)/ EIZO SceenSlicer”, refer to the respective User’s Manual on the disk.

## 2-2 Screen Adjustment

### Digital Input

When digital signals are input, images are displayed correctly based on the preset data of the monitor, but if characters and/or lines appear blurred, go to step 6 “To modify blurred characters/lines [Smoothing]”. When performing more advanced adjustment, see “2-3 Color Adjustment” (page 19) and subsequent pages.

### Analog Input

The monitor screen adjustment is used to suppress flickering of the screen or adjust screen position and screen size correctly according to the PC to be used.





**The Self Adjust function works when all of the following conditions are satisfied:**

- When a signal is input into the monitor for the first time
- When the resolution or Vertical/Horizontal Frequency not displayed before is set

If the screen is not displayed correctly even after performing the Self Adjust operation, adjust the screen according to the procedures on the following pages to use the monitor comfortably.

#### [Adjustment Procedure]

### 1 Perform the auto adjustment.

- **To adjust flickering, screen position, and screen size automatically [Screen]**
  - (1) Choose <Screen> from the <Auto Adjustment> menu, and press .  
The <Auto Adjustment> menu appears.
  - (2) Choose “Execute” with  or , and press .  
Flickering, screen position, and screen size are corrected by the auto-adjustment function.

**If the screen is not displayed correctly even after adjusting in step 1 above, perform the adjustments according to the procedures on the following pages. When the screen is displayed correctly, go to step 5 “To adjust color gradation automatically [Range]”.**

### 2 Prepare the display pattern for the analog display adjustment.

Load the “EIZO LCD Utility Disk” to your PC, and then open the “Screen adjustment pattern files”.

#### Attention

- Wait 30 minutes or more from monitor power on before starting adjustments. It is recommended to turn off the EcoView Sense to prevent the monitor from shifting to the power saving mode in this period (Refer to “2-10 Shifting to the power saving mode when a person leaves the monitor [EcoView Sense]” on page 25).
- The Self Adjust function does not work for the images under the resolution of 800 × 600 (SVGA).
- The self adjustment (or automatic screen adjustment) function works correctly when an image is fully displayed over the Windows or Macintosh display area. They do not work properly in the cases below:
  - When an image is displayed only on a part of the screen (command prompt window, for example)
  - When a black background (wallpaper, etc.) is in useAlso, these functions cannot work properly in some graphic boards.

#### NOTE


- For details and instructions on opening the “Screen adjustment pattern files”, refer to the “Readme.txt” file.



### 3 Perform the auto adjustment again with the analog screen adjustment pattern displayed.

- **To adjust flickering, screen position, and screen size automatically [Screen]**

- (1) Display Pattern 1 of the “Screen adjustment pattern files” in full screen on the monitor.

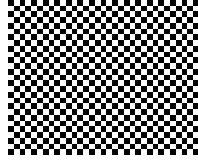

- (2) Choose <Screen> from the <Auto Adjustment> menu, and press .  
The <Auto Adjustment> menu appears.
- (3) Choose “Execute” with or , and press .  
Flickering, screen position, and screen size are corrected by the auto-adjustment function.


**If the screen is not displayed correctly even after adjusting in step 3 above, perform the adjustments according to the procedures on the following pages. When the screen is displayed correctly, go to step 5 “To adjust color gradation automatically [Range]”.**

### 4 Perform advanced adjustments for the following using the <Screen> menu of the Adjustment menu.

Adjust the clock, phase and position, in this order.

- **To eliminate vertical bars [Clock]**


- (1) Choose <Clock> from the <Screen> menu, and press .  
The <Clock> menu appears.
- (2) Adjust the clock with or , and press .  
The adjustment is completed.

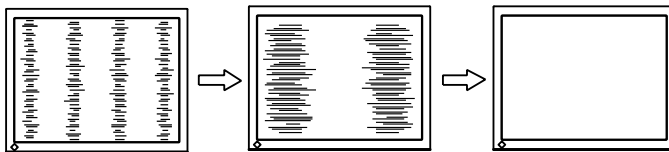

- **To remove flickering or blurring [Phase]**

Adjustable range: 0 to 63

- (1) Choose <Phase> from the <Screen> menu, and press .  
The <Phase> menu appears.
- (2) Adjust the phase with or , and press .  
The adjustment is completed.

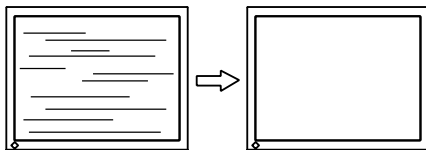

#### NOTE

- Press the control button slowly so as not to miss the adjustment point.
- When blurring, flickering or bars appear on the screen after adjustment, proceed to [Phase] to remove flickering or blurring.







#### Attention


- Flickering or blurring may not be eliminated depending on your PC or graphics board.

#### NOTE

- When vertical bars appear on the screen after adjustment, go back to “To eliminate vertical bars [Clock]”.  
(Clock → Phase → Position)

- **To correct screen position [Position]**

- (1) Choose <Position> from the <Screen> menu, and press .  
The <Position> menu appears.
- (2) Adjust the position with  /  /  /  to display the image properly in the display area of the monitor, and press .  
The adjustment is completed.

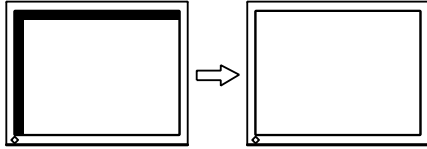






## 5 Adjust the color gradation.

- **To adjust color gradation automatically [Range]**

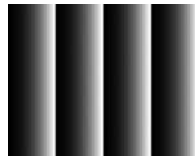Every color gradation (0 to 255) can be displayed by adjusting the signal output level.

- (1) Display Pattern 2 in full screen on the monitor using the “Screen adjustment pattern files”.








- (2) Choose <Range> from the <Auto Adjustment> menu, and press .
- (3) Choose “Execute” with  or , and press .  
The output range is adjusted automatically.
- (4) Close the Pattern 2.

## 6 Modify blurred characters or lines.

- **To modify blurred characters/lines [Smoothing]**

When a image is displayed with a resolution other than the recommendation, the characters or lines of the displayed image may be blurred.

Adjustable range: 1 to 5

- (1) Choose <Screen> from the Adjustment menu, and press .
- (2) Choose <Smoothing> from the <Screen> menu, and press .
- (3) Adjust the characters/lines with  or , and press .  
The adjustment is completed.

### NOTE

- Since the number of pixels and the pixel positions are fixed on the LCD monitor, only one position is provided to display images correctly. The position adjustment is made to shift an image to the correct position.

### Attention

- Smoothing setting may not be required depending on the display resolution. (You cannot choose the smoothing icon.)


## 2-3 Color Adjustment

- **To select the display mode (FineContrast mode)**

FineContrast allows you to select the best display mode easily according to the monitor's application.

FineContrast mode


Mode	Purpose
Custom	Available to change all setting values.
sRGB	Suitable for color matching with sRGB compatible peripherals.
Text	Suitable for displaying texts for word processing or spreadsheets.
Picture	Suitable for displaying images such as photos or picture images.
Movie	Suitable for playing back animated images.

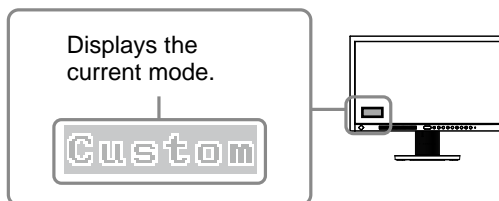

(1) Press ◀ or ▶.

The FineContrast mode name appears at the lower left of the screen.

(2) Change the mode by pressing ◀ or ▶ while mode name is displayed.

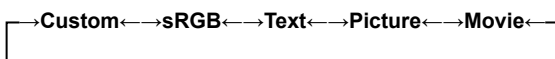

**NOTE**

- The Adjustment menu and the FineContrast mode name cannot be displayed at the same time.
- “ScreenManager Pro for LCD (DDC/CI)” allows you to select the FineContrast mode automatically according to the application used. (Refer to “Chapter 3 Auto FineContrast” on the User’s Manual for “ScreenManager Pro for LCD (DDC/CI)”.)

- **To perform advanced adjustments**

Independent setting and saving of color adjustment are available for each FineContrast mode.

- **Adjustment items in each mode**

According to the FineContrast mode selected, the adjustable function differs.

√ : Adjustment available    – : Invalid for adjustment

Icon	Function	FineContrast mode				
		Custom	sRGB	Text	Picture	Movie
	Brightness	√	√	√	√	√
	Contrast	√	–	√	√	√
	Temperature	√	–	√	√	√
	Gamma	√	–	√	–	–
	Saturation	√	–	√	√	√
	Hue	√	–	√	√	√
	Gain	√	–	–	–	–
	Overdrive	√	–	–	–	–
	Reset	√	√	√	√	√

- **To adjust the brightness [Brightness]**

The screen brightness is adjusted by changing the brightness of the backlight (Light source from the LCD back panel).

Adjustable range: 0 to 100%

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose <Brightness> from the <Color> menu, and press .  
The <Brightness> adjustment menu appears.
- (3) Adjust the brightness with or , and press .  
The adjustment is completed.

**Attention**

- Wait 30 minutes or more from monitor power on before starting adjustments. It is recommended to turn off the EcoView Sense to prevent the monitor from shifting to the power saving mode in this period (Refer to “2-10 Shifting to the power saving mode when a person leaves the monitor [EcoView Sense]” on [page 25](#)).
- Perform the range adjustment first when adjusting color for analog input signals. (Refer to “To adjust color gradation automatically” on [page 18](#)).
- The same image may be seen in different colors on multiple monitors due to their monitor-specific characteristics. Make fine color adjustment visually when matching colors on multiple monitors.

**NOTE**

- The values shown in “%” or “K” are available only as reference.
- Using the “ScreenManager Pro for LCD (DDC/CI)” allows you to perform the color adjustment by using the mouse and keyboard of your PC. The adjusted status can be registered as a color data and restore the data later. (Refer to “Chapter 4 Color Adjustment” on the User’s Manual for “ScreenManager Pro for LCD (DDC/CI)”.)



 


**NOTE**

- You can also adjust the brightness by using the direct menu (Refer to “1-4 Functions and Basic Operation” on [page 11](#)).

### ● To adjust the contrast [Contrast]

The luminance of the screen is adjusted by varying the video signal level.

Adjustable range: 0 to 100%

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose <Contrast> from the <Color> menu, and press .  
The <Contrast> adjustment menu appears.
- (3) Adjust the contrast with  or , and press .  
The adjustment is completed.




 

### ● To adjust the color temperature [Temperature]

The color temperature can be adjusted. The color temperature is normally used to express the hue of “White” and/or “Black” by a numerical value. The value is expressed in degrees “K” (Kelvin).

In the same way as the flame temperature, the image on the monitor is displayed reddish if the color temperature is low and is bluish if the color temperature is high. The gain preset values are set for each color temperature setting value.

5000K	The white color image is displayed reddish. The 5000K or 6000K is usually used in the printing industry.
6500K	The white color image is displayed in warm white like paper white. The temperature is suitable to display photographs or video images.
9300K	The white color image is displayed slightly bluish white.




 

Adjustable range: Off, 4000K-10000K (specified by every 500K unit, including 9300K)

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose <Temperature> from the <Color> menu, and press .  
The <Temperature> adjustment menu appears.
- (3) Adjust the color temperature with  or , and press .  
The adjustment is completed.

### ● To adjust the gamma value [Gamma]

The gamma value can be adjusted. The luminance of the monitor varies depending on the input signal, however, the variation rate is not proportional to the input signal. To keep the balance between the input signal and the luminance of the monitor is called as “Gamma correction”.

Adjustable range: 1.8, 2.0, 2.2

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose <Gamma> from the <Color> menu, and press .  
The <Gamma> adjustment menu appears.
- (3) Adjust the gamma value with  or , and press .  
The adjustment is completed.

#### NOTE

- In the contrast of 50%, every color gradation is displayed.
- When adjusting the monitor, it is recommended to perform the brightness adjustment which may not lose the gradation characteristics, prior to the contrast adjustment. Perform the contrast adjustment in the following cases.
  - When you feel the image is dark even if the brightness is set to 100%. (Set the contrast to higher than 50%).
  - When you feel the image is bright even if the brightness is set to 0%. (Set the contrast to lower than 50%).

#### NOTE

- You cannot adjust the value if the icon is not displayed, depending on the FineContrast mode selected. (See “Adjustment items in each mode” on [page 20](#).)
- [Gain] allows you to perform more advanced adjustment (See “To adjust the gain value” on [page 22](#)).
- If you set to [Off], the image is displayed in the preset color of the monitor (Gain: 100% for each RGB).
- When changing the gain value, the color temperature adjusting range is changed to “Off”.






#### NOTE

- You cannot adjust the value if the icon is not displayed, depending on the FineContrast mode selected. (See “Adjustment items in each mode” on [page 20](#).)

### ● To adjust the color saturation [Saturation]

This function allows you to adjust the saturation of the color on the monitor.






Adjustable range: -128 to 127

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose <Saturation> from the <Color> menu, and press .  
The <Saturation> adjustment menu appears.
- (3) Adjust the saturation of the color with  or , and press .  
The adjustment is completed.

### ● To adjust the hue [Hue]

This function allows you to adjust the hue. If you set the hue to a high value, the image turns greenish. If low, the image turns purplish.






Adjustable range: -32 to 32

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose <Hue> from the <Color> menu, and press .  
The <Hue> adjustment menu appears.
- (3) Adjust the hue with  or , and press .  
The adjustment is completed.

### ● To adjust the gain value [Gain]

Each luminance of red/green/blue composing the color is called "Gain". The gain adjustment may change the color tone of the "White".




 

Adjustable range: 0 to 100%

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose <Gain> from the <Color> menu, and press .  
The <Gain> adjustment menu appears.
- (3) Adjust the respective value of Red, Green or Blue with  or , and press .  
The adjustment is completed.

### ● To set the Overdrive intensity [Overdrive]

This function allows you to set the overdrive intensity based on the use of the monitor. Image lag sensation is reduced if [Enhanced] is set when displaying animated images.

Adjustment range: Enhanced, Standard, Off

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose <Overdrive> from the <Color> menu, and press .  
The <Overdrive> setting menu appears.
- (3) Select "Enhanced", "Standard" or "Normal" with  or , and press .  
The setting is completed.

#### Attention

- This function does not enable to display every color gradation.

#### NOTE

- You cannot adjust the value if the icon is not displayed, depending on the FineContrast mode selected. (See "Adjustment items in each mode" on [page 20](#).)
- Setting the minimum (-128) turns the image to a monochrome screen.

#### Attention

- This function does not enable to display every color gradation.

#### NOTE

- You cannot adjust the value if the icon is not displayed, depending on the FineContrast mode selected. (See "Adjustment items in each mode" on [page 20](#).)

#### Attention

- This function does not enable to display every color gradation.

#### NOTE

- You cannot adjust the value if the icon is not displayed, depending on the FineContrast mode selected. (See "Adjustment items in each mode" on [page 20](#).)
- The gain value may change depending on the value of the color temperature.
- When changing the gain value, the color temperature adjusting range is changed to "Off".

#### Attention

- Overdrive function is disabled in the following case:
  - Vertical frequency of input signal is not 60Hz.
  - Select [Normal] during <Screen Size>. (excluding the case that display resolution is 1920 x 1080)



 


#### NOTE

- You cannot adjust the value if the icon is not displayed, depending on the FineContrast mode selected. (See "Adjustment items in each mode" on [page 20](#).)

## 2-4 Adjusting Volume [Volume]






This function allows you to adjust volume up or down.

Adjustable range: 0 to 30

- (1) Choose <Sound> from the Adjustment menu, and press .
- (2) Choose <Volume> from the <Sound> menu, and press .  
The volume adjustment menu appears.
- (3) Adjust the volume with  or , and press .  
The adjustment is completed.






## 2-5 Switching sound source during DisplayPort signal input [Source]

 This function allows you to switch sound source during DisplayPort signal input. You can select the DisplayPort or Stereo Mini Jack.

- (1) Choose <Sound> from the Adjustment menu, and press .
- (2) Choose <Source> from the <Sound> menu, and press .  
The Source adjustment menu appears.
- (3) Select “DisplayPort” or “Stereo Mini Jack” with  or , and press .  
The setting is completed.






## 2-6 Turning off the audio output at Power Saving mode [Power Save]

This monitor allows you to turn off the audio output from the speakers/headphone at the power saving mode.

- (1) Choose <Sound> from the Adjustment menu, and press .
- (2) Choose <Power Save> from the <Sound> menu, and press .  
The <Power Save> setting menu appears.
- (3) Select “On” or “Off” with  or , and press .  
The setting is completed.

## 2-7 Setting On/Off for Power Saving mode [Power Save]

This function allows you to set the monitor into the power saving mode according to the PC status. When the monitor has shifted to the power saving mode, the images on the screen are not displayed.

- (1) Choose <PowerManager> from the Adjustment menu, and press .
- (2) Choose <Power Save> from the <PowerManager> menu, and press .  
The <Power Save> setting menu appears.
- (3) Select “On” or “Off” with  or , and press .  
The setting is completed.

### NOTE

- You can also adjust the brightness by using the direct menu (Refer to “1-4 Functions and Basic Operation” on [page 11](#)).
- The volume for the DisplayPort and the stereo mini jack can be set individually.

### NOTE

- This function is available with DisplayPort input.

### NOTE

- No audio is output while the monitor is in the Power Saving mode, if input signal and sound source are of DisplayPort.

## ■ Analog input

This monitor complies with the VESA DPM standard.

### [Power Saving System]

PC		Monitor	Power Indicator
Operating		Operating	Blue
Power saving	STAND-BY SUSPENDED OFF	Power saving	Orange

## ■ Digital input

- DVI

This monitor complies with the DVI DMPM standard.

- DisplayPort

This monitor complies with the DisplayPort Standard V1.1a.

### [Power Saving System]

The monitor enters the power saving mode in five seconds in connection with the PC setting.

PC	Monitor	Power Indicator
Operating	Operating	Blue
Power saving	Power saving	Orange








### Attention

- Turning off the main power switch or unplugging the power cord completely shuts off power supply to the monitor.
- Power consumption varies even when the stereo mini jack cable is connected.

## 2-8 Turning off the monitor automatically [Off Timer]




 
 

This function allows you to switch the setting to turn off the monitor automatically after a specified time has passed at the power saving mode.

Adjustable range: Disable, Enable (0, 1, 2, 3, 5, 10, 15, 20, 25, 30, 45 min, 1-5h)

- (1) Choose <PowerManager> from the Adjustment menu, and press .
- (2) Choose <Off Timer> from the <PowerManager> menu, and press .
- The <Off Timer> setting menu appears.
- (3) Select "Enable" or "Disable" with  or .
- When selecting "Enable", set a monitor Off time with  or .
- (4) Press .
- The setting is completed.

## 2-9 Setting On/Off for the automatic brightness adjustment function [Auto EcoView]

The sensor on the front side of the monitor detects the environmental brightness to adjust the screen brightness automatically and comfortably by using the Auto EcoView function.

- (1) Press .
- The <EcoView> setting menu appears.
- (2) Choose "Auto EcoView" with  or . (You can also choose it with  or , and press .
- The setting is completed.

### NOTE





 

 
- Be careful not to block the sensor on the lower side of the monitor when using the Auto EcoView function.



## 2-10 Shifting to the power saving mode when a person leaves the monitor [EcoView Sense]

The sensor on the front side of the monitor detects the movement of a person by using the EcoView Sense function. When a person moves away from the monitor, it shifts to the power saving mode automatically and does not display the images on the screen to reduce the power consumption. When a person comes near the monitor again, it comes back from the power saving mode and displays the images. The detection level of the EcoView Sense sensor can be changed according to the environment of usage.

### • To set EcoView Sense On/Off








- (1) Press .  
The <EcoView> setting menu appears.
- (2) Choose "EcoView Sense" with  or . (You can also choose it with .)
- (3) Select "On" or "Off" with  or , and press .  
The setting is completed.

### • To change the detection level

The default setting is "Auto". If the monitor does not shift to the power saving mode as you intended, change the detection level according to the following procedure.

Adjustable range: see below list

Level	Detectable Range	Details
Auto (default setting)	Automatic setting (120 cm or less)	The detectable range is defined by the person's movement. When you get out of the range, the monitor shifts to the power saving mode. Since the function determines whether the object is moving or not, the monitor can shift to the power saving mode even if there is a chair or wall in the detectable range.
Manual1	Automatic setting (90 cm or less)	
Manual2	120 cm or less	When you get out of the detectable range, the monitor shifts to the power saving mode. This setting is recommended if the monitor frequently shifts to the power saving mode when the level is "Auto" or "Manual1" even though you are in front of the monitor.
Manual3	90 cm or less	

- (1) Choose <PowerManager> from the Adjustment menu, and press .
- (2) Choose <EcoView Sense> from the <PowerManager> menu, and press .  
The <EcoView Sense> setting menu appears.
- (3) Select "Auto" or "Manual" with  or .  
When selecting "Manual", select 1, 2 or 3 for the detection level of the sensor with  or .
- (4) Press .  
The setting is completed.

#### NOTE

- At the time of shifting to Power Saving mode, the icon that indicates shifting is displayed.








 

#### NOTE

- When the orientation of the Adjustment menu is set to "Portrait", the EcoView Sense is turned off (see 2-14 "Setting Orientation" on page 28). Change the setting to on.

## 2-11 Setting On/Off for the power saving level indicator [EcoView Index]

By using the EcoView Index function, the indicator that shows the level of power saving appears at the time of turning on the monitor, adjusting the brightness or switching the FineContrast mode.

The power saving ratio comes to high as the indicator level meter lights towards right.

- (1) Press .  
The <EcoView> setting menu appears.
- (2) Choose "EcoView Index" with  or . (You can also choose it with )
- (3) Select "On" or "Off" with  or , and press .  
The setting is completed.


## 2-12 Screen Size Selection






### • To change screen size [Screen Size]

The image with the resolution other than the recommended resolution is displayed in full screen automatically. You can change the screen size by using <Screen Size> from <Others> menu.

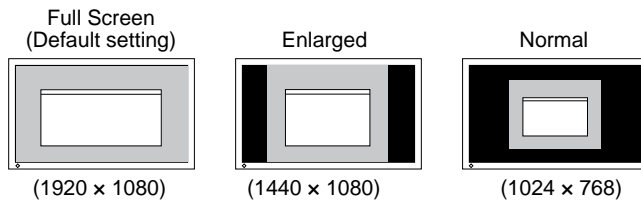Setting	Function
Full Screen (default setting)	Displays an image in full screen. Images are distorted in some cases because the vertical rate is not equal to the horizontal rate.
Enlarged	Displays an image in full screen. In some cases, a blank horizontal or vertical border appears to equalize the vertical rate and the horizontal rate.
Normal	Displays images with the specified resolution.

Example: Image size 1024 × 768




- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose <Screen Size> from the <Others> menu, and press .  
The screen size setting window appears.
- (3) Select "Full Screen," "Enlarged," or "Normal" with  or , and press .  
The screen size setting is completed.






### Attention

- Selecting [Enlarged] or [Normal] does not enable to display every color gradation.

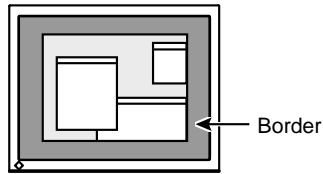- **To adjust brightness of non-display area [Border Intensity]**

A border (black area with no image) around the image appears in the “Normal” or “Enlarged” mode.









- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose <Border Intensity> from the <Others> menu, and press .  
The <Border Intensity> menu appears.
- (3) Adjust border intensity with  or , and press .  
The border intensity adjustment is completed.

## 2-13 Setting Adjustment Menu Display

- **To update menu settings [Menu Size/Menu Position/Menu Off Timer/Translucent]**







### Menu Size

Change the Adjustment menu size using the following procedure.

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose <Menu Settings> from the <Others> menu, and press .
- (3) Choose <Menu Size> from the <Menu Settings> menu, and press .  
The <Menu Size> menu appears.
- (4) Select “Normal” or “Enlarged” with  or , and press .  
The setting is completed.

### Menu Position









Adjust the menu position using the following procedure.

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose <Menu Settings> from the <Others> menu, and press .
- (3) Choose <Menu Position> from the <Menu Settings> menu, and press .  
The <Menu Position> menu appears.
- (4) Select a menu position with  or , and press .  
The setting is completed.

## Menu Off Timer







Set the menu display time using the following procedure.

Adjustment range: Disable, Enable (15, 30, 45, 60s)

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose <Menu Settings> from the <Others> menu, and press .
- (3) Choose <Menu Off Timer> from the <Menu Settings> menu, and press .  
The <Menu Off Timer> menu appears.
- (4) Select "Enable" or "Disable" with  or .  
When selecting "Enable", choose a time for displaying menu with  or .
- (5) Press .  
The setting is completed.

## Translucent






Set the transparency for menu display using the following procedure.

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose <Menu Settings> from the <Others> menu, and press .
- (3) Choose <Translucent> from the <Menu Settings> menu, and press .  
The <Translucent> menu appears.
- (4) Adjust the transparency for menu display with  or , and press .  
The setting is completed.


## 2-14 Setting Orientation




### • To set the orientation of the Adjustment menu [Orientation]

This function allows you to change the orientation of the Adjustment menu when using the monitor screen in vertical display position.

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose <Orientation> from the Others menu, and press .
- (3) Select "Landscape" or "Portrait" with  or , and press .  
The setting is completed.
- (4) When selecting "Portrait", turn the monitor screen 90° in clockwise direction.

## 2-15 Locking Buttons

This function allows you to lock  to prevent changing the adjusted/set status.

- (1) Press  to turn off the monitor.
- (2) Press  holding  down to turn on the monitor.  
The Lock/Unlock setting is toggled by performing the operation in step 2.

### NOTE

- The display time of the FineContrast mode, EcoView menu and EcoView Index remains unchanged.

### NOTE

- For using the monitor with "Portrait" position, the graphics board supporting portrait display is required. When placing the monitor in a "Portrait" position, settings of your graphics board need to be changed. Refer to the manual of the graphics board for details.

### Attention

- Be sure that the cables are correctly connected.



## 2-16 Displaying Monitor Information [Information]

This function allows you to display the input signal status, current resolution and model name.

Information 1/3 : Input signal status, resolution and H/V frequency




Information 2/3 : Enable/Disable setting for DDC/CI

Information 3/3 : Model name, serial number and usage time

- (1) Choose <Information> from the Adjustment menu, and press .  
The <Information> menu appears.
- (2) Then, press  to check settings, etc.

## 2-17 Enabling/Disabling DDC/CI communication






This function allows you to enable/disable the DDC/CI communication.

- (1) Press  to turn off the monitor.
- (2) Press  holding  down to turn on the monitor.

The Enable/Disable setting is toggled by performing the operation in step 2.

## 2-18 Setting Power Indicator ON/OFF [Power Indicator]

This function allows you to set the power indicator (blue) ON/OFF in the monitor ON condition.







- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose <Power Indicator> from the <Others> menu, and press .  
The <Power Indicator> menu appears.
- (3) Select “Enable” or “Disable” with  or , and press .  
The setting is completed.

## 2-19 Setting Language [Language]

This function allows you to select a language for the adjustment menu or displaying message.

### Selectable languages

English/German/French/Spanish/Italian/Swedish/Simplified Chinese/  
Traditional Chinese/Japanese

- (1) Choose <Language> menu from the Adjustment menu, and press .  
The <Language> menu appears.
- (2) Choose a language with  /  /  / , and press .  
The setting is completed.

### NOTE




- The usage time is not always “0” when you purchase the monitor due to factory inspection.

### NOTE

- You can check the DDC/CI setting in the <Information> menu.

## 2-20 Setting EIZO logo display ON/OFF

The EIZO logo appears on the display when turning on the monitor. This function allows you to display, or not, the EIZO logo.






- (1) Press  to turn off the monitor.
- (2) Press  holding  down to turn on the monitor.  
The EIZO logo display setting is toggled by performing the operation in step 2.

## 2-21 Resuming the Default Setting [Reset]

There are two types of Reset. One is to reset the color adjustment only to the default settings, and the other is to reset all the settings to the default settings.


 



### • To reset color adjustment values

Only the adjustment values in the current FineContrast mode will revert to the default settings (factory settings).

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose <Reset> from the <Color> menu and press .  
The <Reset> menu appears.
- (3) Select <Reset> with  or , and press .  
The color adjustment values revert to the default settings.

### • To reset all adjustments to the factory default settings

Reset all adjustments to the factory default settings.

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose <Reset> from the <Others> menu, and press .  
The <Reset> menu appears.
- (3) Select <Reset> with  or , and press .  
All setting values revert to the default settings.

#### Attention

- After resetting, you cannot undo the operation.

#### NOTE


- For main default settings, refer to “Main default settings (factory settings)” on [page 44](#).

# Chapter 3 Connecting Cables

## 3-1 Connecting More than Two PCs to the Monitor

More than two PCs can be connected to the monitor through the D-Sub mini 15 pin, the DVI-D and the DisplayPort connector on the back of the monitor.


### Connection examples

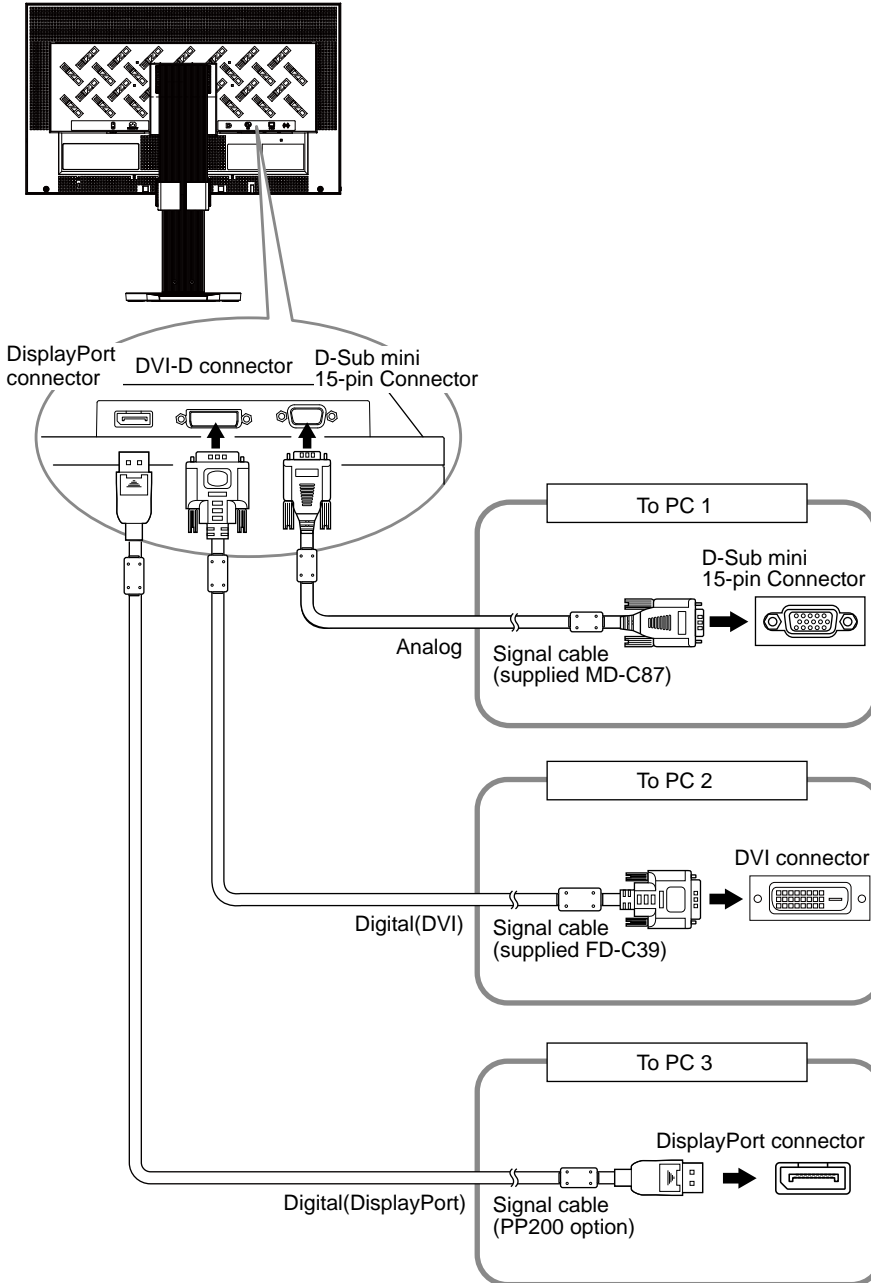

- **To switch the input signal**

The input signal switches each time **(S)** is pressed.

When the signal is switched, the active input port name appears at the top right corner of the screen.

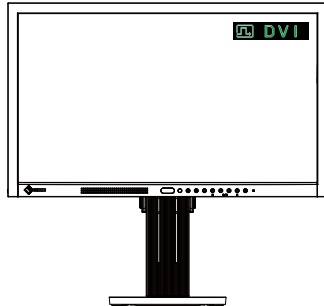

- **To set input signal selection [Input Signal]**

Setting	Function
Auto	The monitor recognizes the connector through which PC signals are input. When a PC is turned off or enters the powersaving mode, the monitor automatically displays another signal.
Manual	The monitor detects only the PC's signals currently displaying automatically. Select an active input signal with <b>(S)</b> .

**NOTE**

- When “Auto” is selected for <InputSignal>, the monitor's power-saving function works only when all PCs are in the power-saving mode.

**[Input signal setting]**




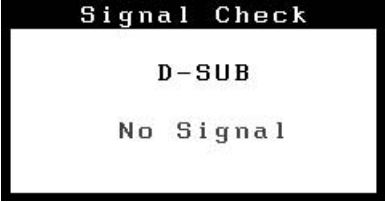
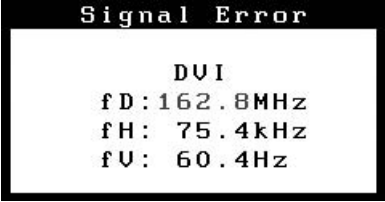
- (1) Choose <Others> from the Adjustment menu, and press **(●)**.
- (2) Choose <Input Signal> from the <Others> menu, and press **(●)**.  
The <Input Signal> menu appears.
- (3) Select “Auto” or “Manual” with **(▲)** or **(▼)**, and press **(●)**.  
The setting is completed.







# Chapter 4 Troubleshooting

If a problem still remains after applying the suggested remedies, contact your local dealer.

- No-picture problems → See No.1 - No.2.
- Imaging problems (digital input) → See No.3 - No.8.
- Imaging problems (analog input) → See No.3 - No.11.
- Other problems → See No.12 - No.17.

Problems	Possible cause and remedy
<p><b>1. No picture</b></p> <ul style="list-style-type: none"> <li>• Power indicator does not light.</li> </ul>	<ul style="list-style-type: none"> <li>• Check whether the power cord is connected correctly. If the problem persists, turn off the monitor, and then turn it on again a few minutes later.</li> <li>• Turn the main power switch on.</li> <li>• Press .</li> </ul>
<ul style="list-style-type: none"> <li>• Power indicator is lighting blue.</li> </ul>	<ul style="list-style-type: none"> <li>• Set each adjusting value in [Brightness], [Contrast] and [Gain] to higher level. (see <a href="#">page 20, 21, 22</a>)</li> </ul>
<ul style="list-style-type: none"> <li>• Power indicator is lighting orange.</li> </ul>	<ul style="list-style-type: none"> <li>• Switch the input signal with .</li> <li>• Operate the mouse or keyboard.</li> <li>• Check whether the PC is turned on.</li> <li>• When the EcoView Sense is on, the monitor may have shifted to the power saving mode. Come near to the monitor.</li> </ul>
<ul style="list-style-type: none"> <li>• Power indicator flashes orange.</li> </ul>	<ul style="list-style-type: none"> <li>• There is a problem in the device that uses DisplayPort connection. Solve the problem, turn off the monitor, and then turn it on again. Refer to the user's manual of the device that uses DisplayPort connection for details.</li> </ul>
<p><b>2. The message below appears.</b></p> <ul style="list-style-type: none"> <li>• This message appears when no signal is input. Example:</li> </ul>	<p>This message appears when the signal is not input correctly even when the monitor functions properly.</p> <ul style="list-style-type: none"> <li>• The message shown left may appear, because some PCs do not output the signal soon after power-on.</li> <li>• Check whether the PC is turned on.</li> <li>• Check whether the signal cable is connected properly.</li> <li>• Switch the input signal with .</li> </ul>
 <p>Example:</p>	
<ul style="list-style-type: none"> <li>• The message shows that the input signal is out of the specified frequency range. (Such signal frequency is displayed in red.) Example:</li> </ul>	<ul style="list-style-type: none"> <li>• Check whether the signal setting of your PC matches the resolution and the vertical frequency settings for the monitor. (see <a href="#">page 10</a>)</li> <li>• Reboot the PC.</li> <li>• Select an appropriate display mode using the graphics board's utility. Refer to the manual of the graphics board for details.</li> </ul>
	<p>fD : Dot Clock (Displayed only when the digital signal inputs)</p> <p>fH : Horizontal Frequency</p> <p>fV : Vertical Frequency</p>
<p><b>3. The screen is too bright or too dark.</b></p>	<ul style="list-style-type: none"> <li>• Adjust using [Brightness] or [Contrast]. (The LCD monitor backlight has a fixed life span. When the screen becomes dark or begins to flicker, contact your local dealer.)</li> </ul>
<p><b>4. Characters are blurred.</b></p>	<ul style="list-style-type: none"> <li>• Check whether the signal setting of your PC matches the resolution and the vertical frequency settings for the monitor. (see <a href="#">page 10</a>)</li> <li>• Adjust using [Smoothing]. (see <a href="#">page 18</a>)</li> </ul>

Problems	Possible cause and remedy
<b>5. Afterimages appear.</b>	<ul style="list-style-type: none"> <li>• Afterimages are particular to LCD monitors. Avoid displaying the same image for a long time.</li> <li>• Use the screen saver or power save function to avoid displaying the same image for extended periods of time.</li> </ul>
<b>6. Green/red/blue/white dots or defective dots remain on the screen.</b>	<ul style="list-style-type: none"> <li>• This is due to LCD panel characteristics and is not a failure.</li> </ul>
<b>7. Interference patterns or pressure marks remain on the screen.</b>	<ul style="list-style-type: none"> <li>• Leave the monitor with a white or black screen. The symptom may disappear.</li> </ul>
<b>8. Noise appears on the screen.</b>	<ul style="list-style-type: none"> <li>• Set [Overdrive] to [Off]. (see <a href="#">page 22</a>)</li> <li>• When entering the signals of HDCP system, the normal images may not be displayed immediately.</li> </ul>
<b>9. Display position is incorrect.</b> 	<ul style="list-style-type: none"> <li>• Adjust image position so that it is displayed properly within the display area using [Position]. (see <a href="#">page 18</a>)</li> <li>• If the problem persists, use the graphics board's utility if available to change the display position.</li> </ul>
<b>10. Vertical bars appear on the screen or a part of the image is flickering.</b> 	<ul style="list-style-type: none"> <li>• Adjust using [Clock]. (see <a href="#">page 17</a>)</li> </ul>
<b>11. Whole screen is flickering or blurring.</b> 	<ul style="list-style-type: none"> <li>• Adjust using [Phase]. (see <a href="#">page 17</a>)</li> </ul>
<b>12. The &lt;Smoothing&gt; icon on the Adjustment menu &lt;Screen&gt; cannot be selected.</b>	<ul style="list-style-type: none"> <li>• You cannot choose the smoothing icon when the screen is displayed in the following resolutions or settings. <ul style="list-style-type: none"> <li>• 1920 x 1080</li> <li>• Select [Normal] during &lt;Screen Size&gt;.</li> </ul> </li> </ul>
<b>13. The adjustment menu does not appear.</b>	<ul style="list-style-type: none"> <li>• Check whether the operation lock function works. (see <a href="#">page 28</a>)</li> </ul>
<b>14. The FineContrast mode is not displayed.</b>	<ul style="list-style-type: none"> <li>• Check whether the Adjustment menu is displayed. (see <a href="#">page 11</a>)</li> </ul>
<b>15. The auto adjust function does not work correctly.</b>	<ul style="list-style-type: none"> <li>• This function does not work when digital signal is input.</li> <li>• This function does not work correctly with some graphics boards.</li> </ul>
<b>16. No audio output.</b>	<ul style="list-style-type: none"> <li>• Check whether the mini jack cable is correctly connected.</li> <li>• Check whether volume is set to 0.</li> <li>• Check the setting of the PC and the audio playback software.</li> <li>• During DisplayPort signal input, check the [Source] setting. (see <a href="#">page 23</a>)</li> </ul>

Problems	Possible cause and remedy
<p><b>17. (When using EcoView Sense)</b>  <b>The images remains to be displayed when you move away from the monitor. The images does not reappear when you come near it.</b></p>	<ul style="list-style-type: none"> <li>• Check the setting environment of the monitor. EcoView Sense may not work correctly in the following environments. <ul style="list-style-type: none"> <li>• There is something that reflects the light such as mirror or glass in front of the sensor.</li> <li>• The monitor is located in a place that receive direct sunlight.</li> <li>• There is some infrared device near the monitor.</li> <li>• There is some obstacle in front of the sensor.</li> </ul> </li> <li>• Check whether any dirt on the sensor. Clean the sensor with a soft cloth.</li> <li>• Check whether you are in front of the monitor. The infrared ray is emitted vertically from the sensor to detect a person.</li> <li>• Check whether the off timer function is on. If it is on, the monitor turns off automatically after a specified time has passed. Therefore, the images does not reappear on the screen even though you come near to it. Press  to turn on the monitor (see <a href="#">page 24</a>).</li> </ul>

# Chapter 5 Reference


## 5-1 How to Attach the Optional Arm

An optional arm (or an optional stand) can be attached by removing the stand section. Please refer to our web site for the corresponding optional arm (or optional stand).

<http://www.eizo.com>

**1** When using the monitor with "Portrait" position, change the position to "Landscape".

**2** Lay the LCD monitor on a soft cloth spread over on a stable surface with the panel surface facing down.

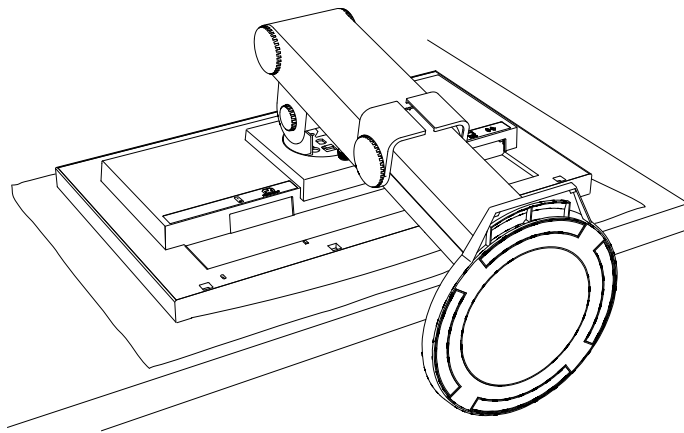


### Attention

- When attaching an arm or stand, follow the instructions of their user's manual.
- When using another manufacturer's arm or stand, confirm the following in advance and select one conforming to the VESA standard. Use the M4 × 12 screws supplied with this monitor.
  - Clearance between the screw holes: 100 mm × 100 mm
  - Thickness of plate: 2.6 mm
  - Strong enough to support weight of the monitor unit (except the stand) and attachments such as cables.
- When using an arm or stand, attach it to meet the following tilt angles of the monitor.
  - Up 45 degrees, down 45 degrees (horizontal display, and vertical display rotated 90 degrees clockwise)
- Connect the cables after attaching an arm.
- Do not move the removed stand up and down. Doing so may result in injury or device damage.

### 3 Remove the stand.


- **FlexStand**

Remove the stand from the monitor while releasing the lock.

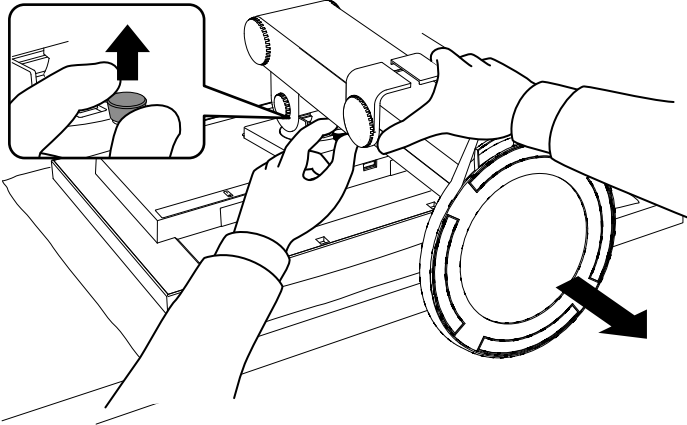


- **TriStand**

Prepare a screwdriver. Loosen the screw securing the unit and the stand with the screwdriver.

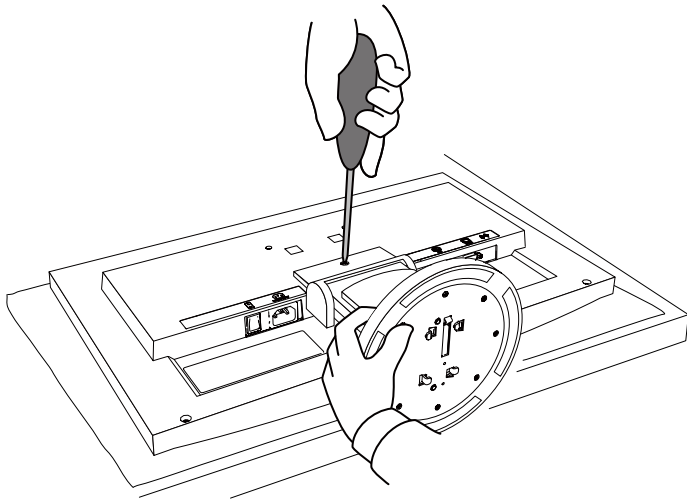

### 4 Attach the monitor to the arm or stand.

Secure the monitor to the arm or stand using the screws specified in the user's manual of the arm or stand.


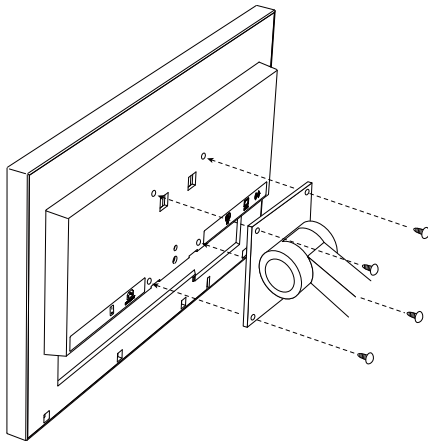


## 5-2 Attaching the FlexStand

The once removed the FlexStand can be attached to the monitor again with the following procedures.


### 1 Put the insertion part of the stand in the slot of the monitor.

At the time, use as a guide that the marks (1) on the stand match to the screw holes (2) of the monitor.

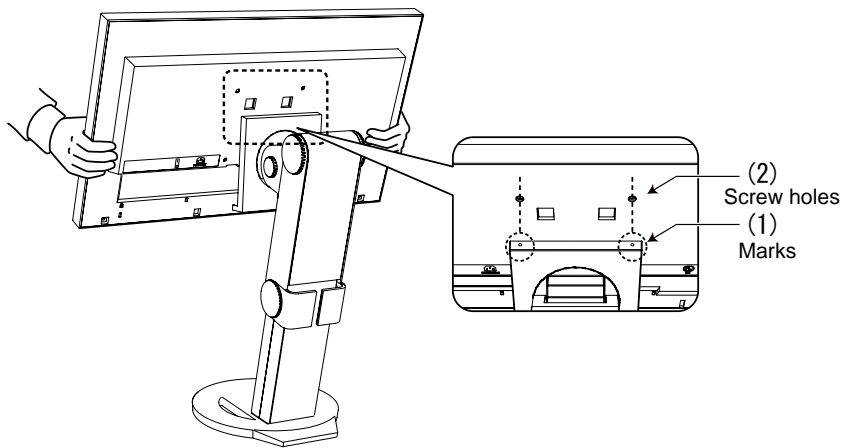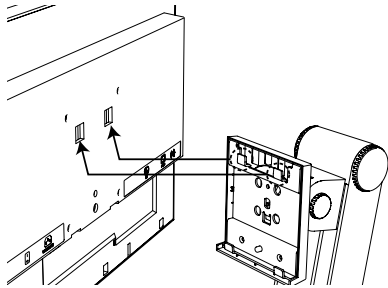

### 2 Attach the stand moving the monitor toward the stand.


Make sure that the lock is latched with clicking sound shown in the figure below.

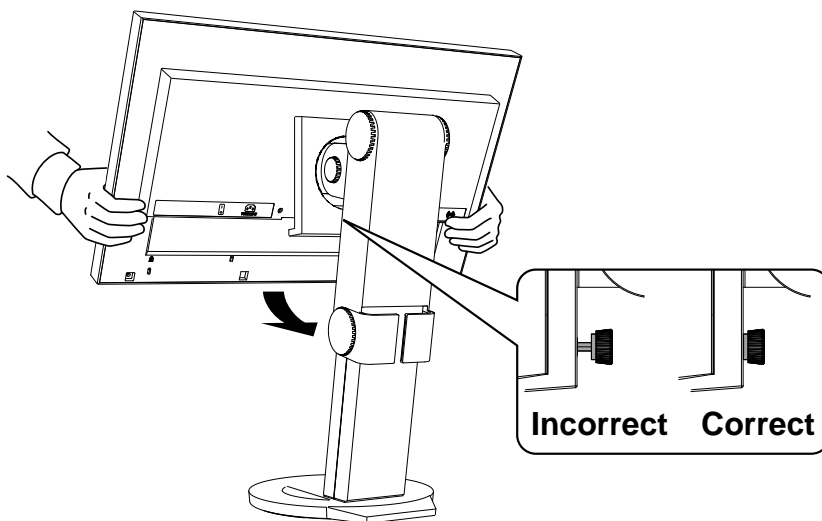


## 5-3 Attaching the TriStand

The once removed the TriStand can be attached to the monitor again with the following procedures.


- 1** Lay the LCD monitor on a soft cloth spread over on a stable surface with the panel surface facing down.

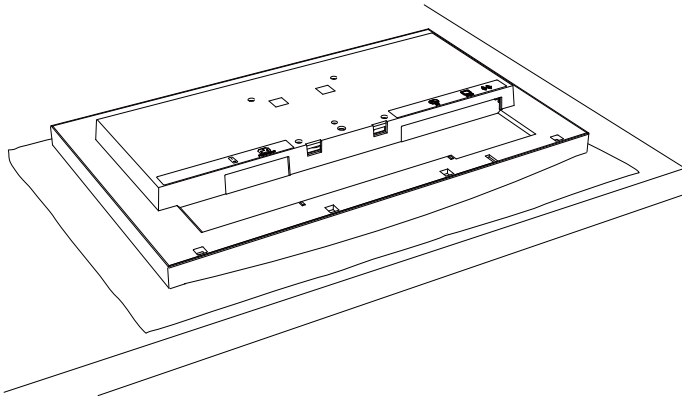

- 2** Put the insertion part of the stand in the slot of the monitor.

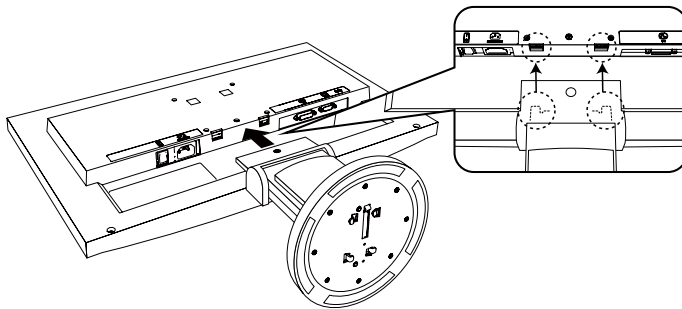

- 3** Prepare a screwdriver. Press the upper part of the stand against the unit and tighten the screw with the screwdriver to fix the stand to the unit.

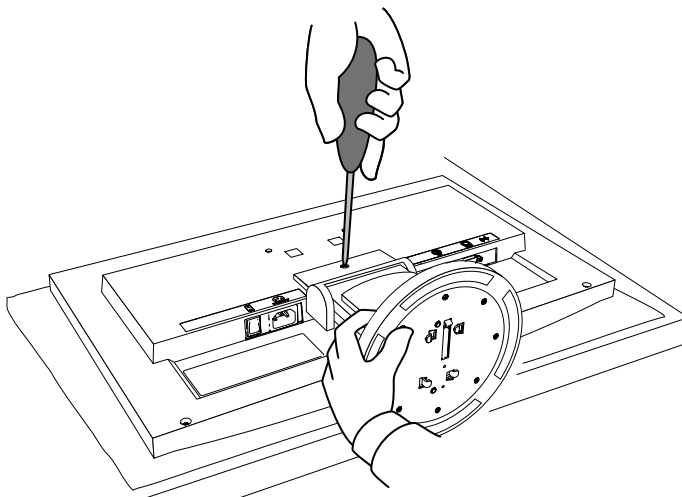


## 5-4 Folding the TriStand


Perform the following procedures to remove the stand base and fold the stand when re-packing a monitor with a TriStand.

**1** Open the cable holder.


**2** Adjust the monitor to its lowest position, and insert a pin into the stand.

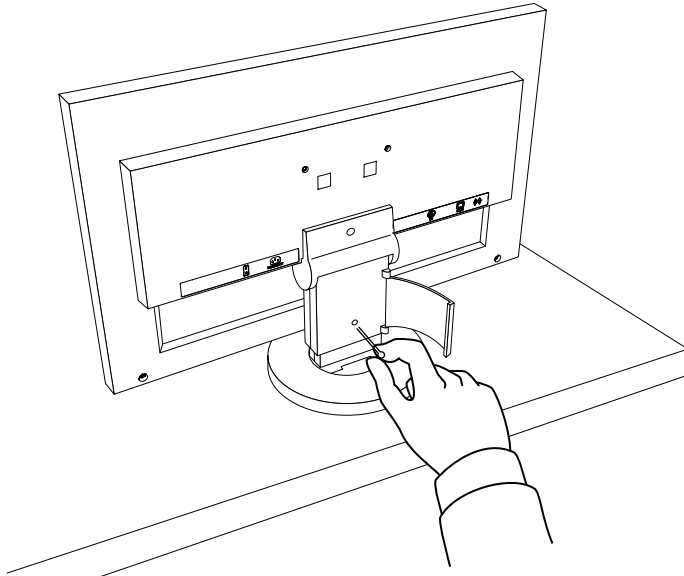

**3** Lay the LCD monitor on a soft cloth spread over on a stable surface with the panel surface facing down.

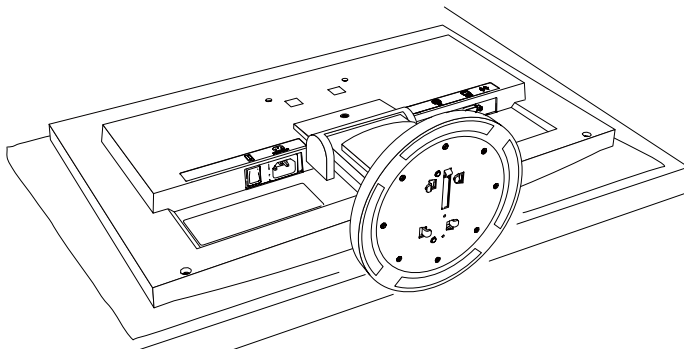


**4** Open the cover of stand base.

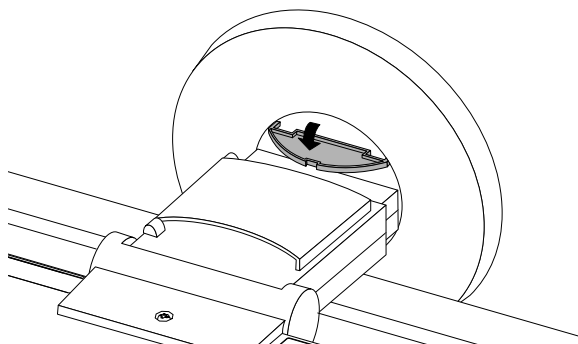



- 5** Rotate the stand base in a counterclockwise direction while holding down the protrusion, and then remove the stand base.

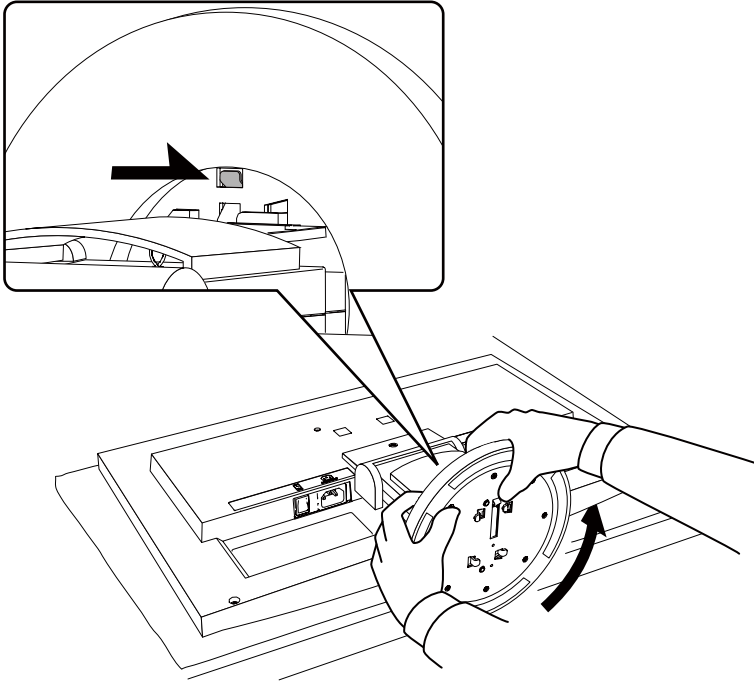

## 5-5 Specifications

### EV2313W

LCD Panel		23.0-inch (580 mm) TFT color LCD with anti-glare hard coating Viewing angle: Horizontal 170°, Vertical 160° (CR:10 or more)
Dot Pitch		0.2655mm
Horizontal Scan Frequency		Analog: 31-81kHz Digital (DVI-D/DisplayPort): 31-68kHz
Vertical Scan Frequency		Analog: 55-76Hz (Non-interlace) Digital (DVI-D/DisplayPort): 59-61Hz (Non-interlace) (VGA TEXT: 69-71Hz)
Resolution		1920 dots x 1080 lines
Max. Dot Clock		Analog: 148.5MHz Digital (DVI-D/DisplayPort): 148.5MHz
Max. Display Color		Approx. 16.77 million colors (1064.33 million colors/10bit LUT)
Display Area (H x V)		509.76mm x 286.74mm
Power Supply		100-120 VAC ±10%, 50/60Hz 0.57A 200-240 VAC ±10%, 50/60Hz 0.35A
Power Consumption	Screen Display On	35W or less (Speaker working) 32W or less (Speaker not working)
	Power saving mode	0.9W or less (for D-Sub single signal input, when stereo mini jack cable is not connected, [EcoView Sense] : "Off")
	Power button Off	0.1W or less (when stereo mini jack cable is not connected)
	Main Power switch Off	0W
Input Signal Connector		D-Sub mini 15-pin DVI-D connector (Applicable to HDCP) DisplayPort (Standard V1.1a, applicable to HDCP and 8-bit) Applicable Format (Audio signal) - 2ch linear PCM (32kHz / 44.1kHz / 48kHz /88.2kHz / 96kHz / 176.4kHz/ 192kHz)
Analog Input Signal (Sync)		Separate, TTL, positive/ negative
Analog Input Signal (Video)		Analog, Positive (0.7Vp-p/75Ω)
Digital Signal (DVI-D) Transmission System		TMDS (Single Link)
Video Signal Memory		Analog signal: 45 Digital signal (DVI-D/DisplayPort): 10
Audio Output		Speaker output: 0.35W (8Ω, THD: 10% or less) Headphone output: 2mW + 2mW
Line input		Input impedance : 48 kΩ (typ.) Input level :1.0 Vrms (Max.)
Plug & Play		Analog / Digital (DVI-D) : VESA DDC 2B / EDID structure 1.3 Digital (DisplayPort) : VESA DisplayPort / EDID structure 1.4
Dimensions (Width) x (Height) x (Depth)	Main unit (including FlexStand)	547 mm (21.5 inch) x 517.8 - 346.5 mm (20.4 - 13.6 inch) x 236 - 221 mm (9.3 - 8.7 inch)
	Main unit (including TriStand)	547 mm (21.5 inch) x 442 - 382 mm (17.4 - 15 inch) x 200 mm (7.9 inch)
	Main unit (without stand)	547 mm (21.5 inch) x 332 mm (13.1 inch) x 44 mm (1.73 inch)

Mass	Main unit (including FlexStand)	Approx. 6.4 kg (14.1 lbs.)
	Main unit (including TriStand)	Approx. 4.8 kg (10.6 lbs.)
	Main unit (without stand)	Approx. 3.6 kg (7.9 lbs.)
Movable range	FlexStand	Tilt: 30° Up, 0° Down Swivel: 172° Right, 172° Left Adjustable height: 225 mm (8.9 inch) (171.3 mm (6.7 inch) when Tilt is 0°) Rotation: 90° (clockwise)
	TriStand	Tilt: 25° Up, 0° Down Swivel: 172° Right, 172° Left Adjustable height: 60 mm (2.36 inch)
Environmental Conditions	Temperature	Operating: 5 °C - 35 °C (41 °F - 95 °F) Storage: -20 °C - 60 °C (-4 °F - 140 °F)
	Humidity	Operating: 20% - 80% R.H. (no condensation) Storage: 10% - 90% R.H. (no condensation)
	Pressure	Operating: 700 to 1,060 hPa Storage: 200 to 1,060 hPa

### EV2333W

LCD Panel	23.0-inch (580 mm) TFT color LCD with anti-glare hard coating Viewing angle: Horizontal 178°, Vertical 178° (CR:10 or more)	
Dot Pitch	0.2655mm	
Horizontal Scan Frequency	Analog: 31-81kHz Digital (DVI-D/DisplayPort): 31-68kHz	
Vertical Scan Frequency	Analog: 55-76Hz (Non-interlace) Digital (DVI-D/DisplayPort): 59-61Hz (Non-interlace) (VGA TEXT: 69-71Hz)	
Resolution	1920 dots × 1080 lines	
Max. Dot Clock	Analog: 148.5MHz Digital (DVI-D/DisplayPort): 148.5MHz	
Max. Display Color	Approx. 16.77 million colors (1064.33 million colors/10bit LUT)	
Display Area (H × V)	509.76mm × 286.74mm	
Power Supply	100-120 VAC ±10%, 50/60Hz 0.75A 200-240 VAC ±10%, 50/60Hz 0.45A	
Power Consumption	Screen Display On	45W or less (Speaker working) 42W or less (Speaker not working)
	Power saving mode	1W or less (for D-Sub single signal input, when stereo mini jack cable is not connected, [EcoView Sense] : "Off")
	Power button Off	0.1W or less (when stereo mini jack cable is not connected)
	Main Power switch Off	0W
Input Signal Connector	D-Sub mini 15-pin	
	DVI-D connector (Applicable to HDCP)	
	DisplayPort (Standard V1.1a, applicable to HDCP and 8-bit) Applicable Format (Audio signal) - 2ch linear PCM (32kHz / 44.1kHz / 48kHz / 88.2kHz / 96kHz / 176.4kHz / 192kHz)	
Analog Input Signal (Sync)	Separate, TTL, positive/ negative	
Analog Input Signal (Video)	Analog, Positive (0.7Vp-p/75Ω)	
Digital Signal (DVI-D) Transmission System	TMDS (Single Link)	

Video Signal Memory		Analog signal: 45 Digital signal (DVI-D/DisplayPort): 10
Audio Output		Speaker output: 0.35W (8Ω, THD: 10% or less) Headphone output: 2mW + 2mW
Line input		Input impedance : 48 kΩ (typ.) Input level :1.0 Vrms (Max.)
Plug & Play		Analog / Digital (DVI-D) : VESA DDC 2B / EDID structure 1.3 Digital (DisplayPort) : VESA DisplayPort / EDID structure 1.4
Dimensions (Width) × (Height) × (Depth)	Main unit (including FlexStand)	547 mm (21.5 inch) × 517.8 - 346.5 mm (20.4 - 13.6 inch) × 236 - 221 mm (9.3 - 8.7 inch)
	Main unit (including TriStand)	547 mm (21.5 inch) × 442 - 382 mm (17.4 - 15 inch) × 200 mm (7.9 inch)
	Main unit (without stand)	547 mm (21.5 inch) × 332 mm (13.1 inch) × 47.5 mm (1.87 inch)
Mass	Main unit (including FlexStand)	Approx. 7.1 kg (15.7 lbs.)
	Main unit (including TriStand)	Approx. 5.5 kg (12.1 lbs.)
	Main unit (without stand)	Approx. 4.3 kg (9.5 lbs.)
Movable range	FlexStand	Tilt: 30° Up, 0° Down Swivel: 172° Right, 172° Left Adjustable height: 225 mm (8.9 inch) (171.3 mm (6.7 inch) when Tilt is 0°) Rotation: 90° (clockwise)
	TriStand	Tilt: 25° Up, 0° Down Swivel: 172° Right, 172° Left Adjustable height: 60 mm (2.36 inch)
Environmental Conditions	Temperature	Operating: 5 °C - 35 °C (41 °F - 95 °F) Storage: -20 °C - 60 °C (-4 °F - 140 °F)
	Humidity	Operating: 20% - 80% R.H. (no condensation) Storage: 10% - 80% R.H. (no condensation)
	Pressure	Operating: 700 to 1,060 hPa Storage: 200 to 1,060 hPa

### Main default settings (factory settings)


Auto EcoView		On
EcoView Sense		On
EcoView Index		On
Smoothing		3
FineContrast Mode		Custom
PowerManager - Power Save		On
Input Signal		Manual
Screen Size		Full Screen
Off Timer		Disable
Menu Settings	Menu Size	Normal
	Menu Off Timer	45 sec
Language		English

## Outside Dimensions

### EV2313W


- FlexStand

unit : mm (inch)

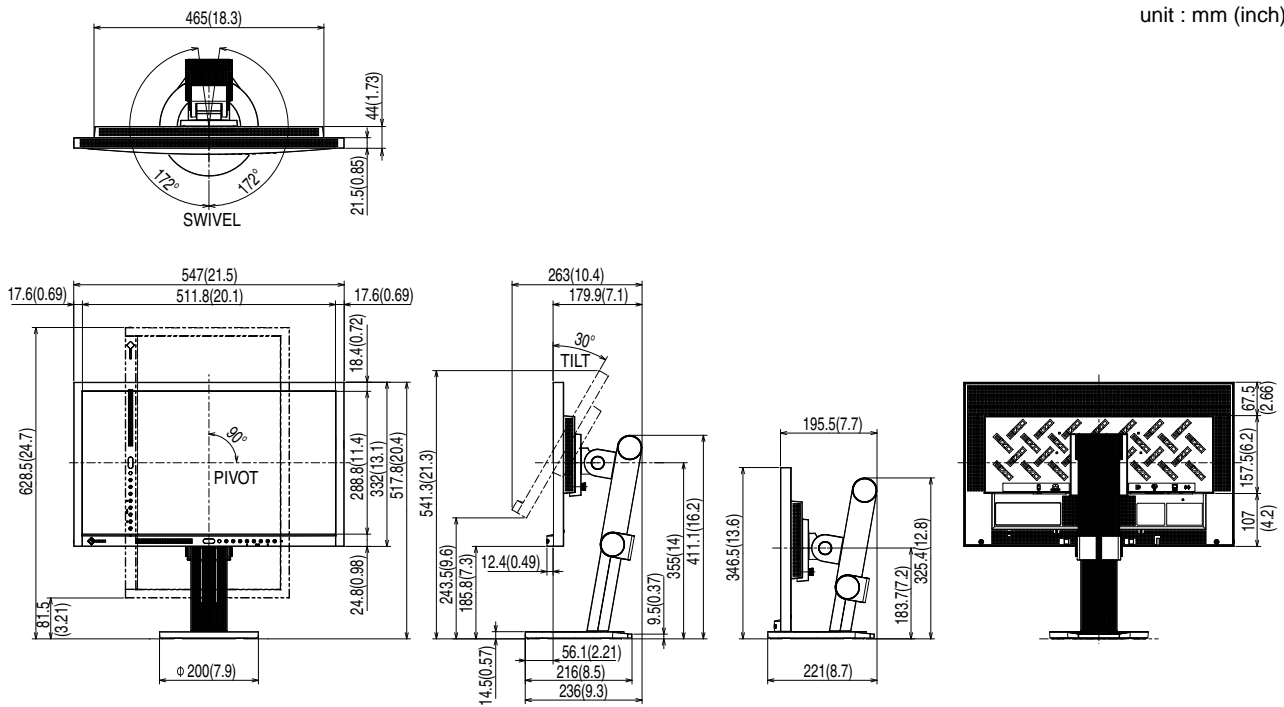

- TriStand


unit : mm (inch)

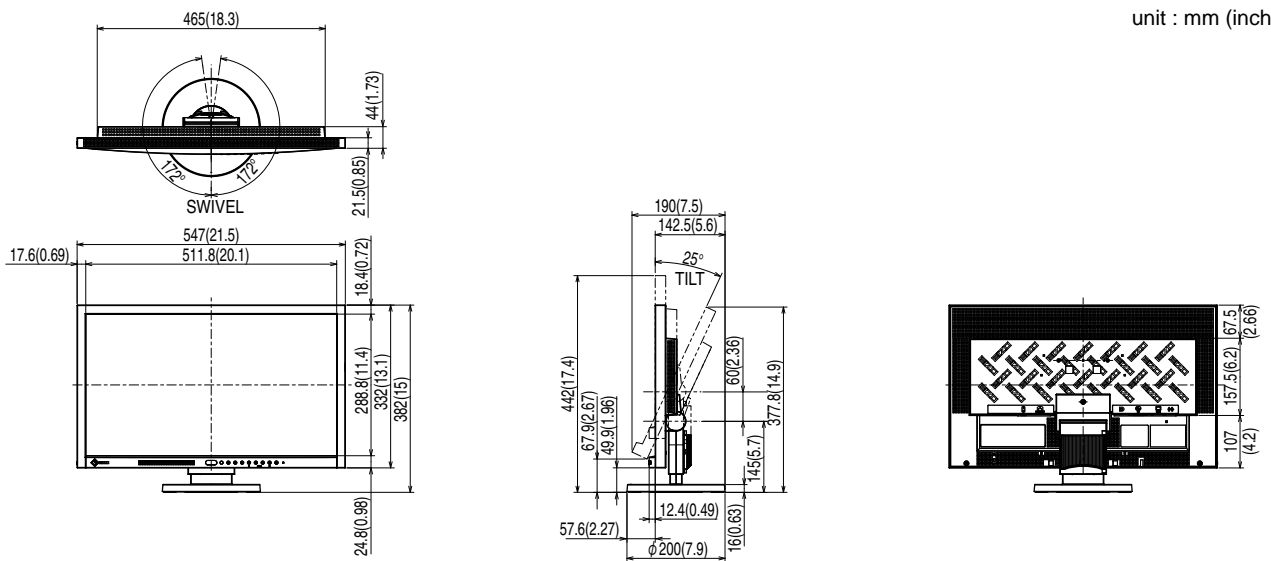

**EV2333W**


- FlexStand

unit : mm (inch)

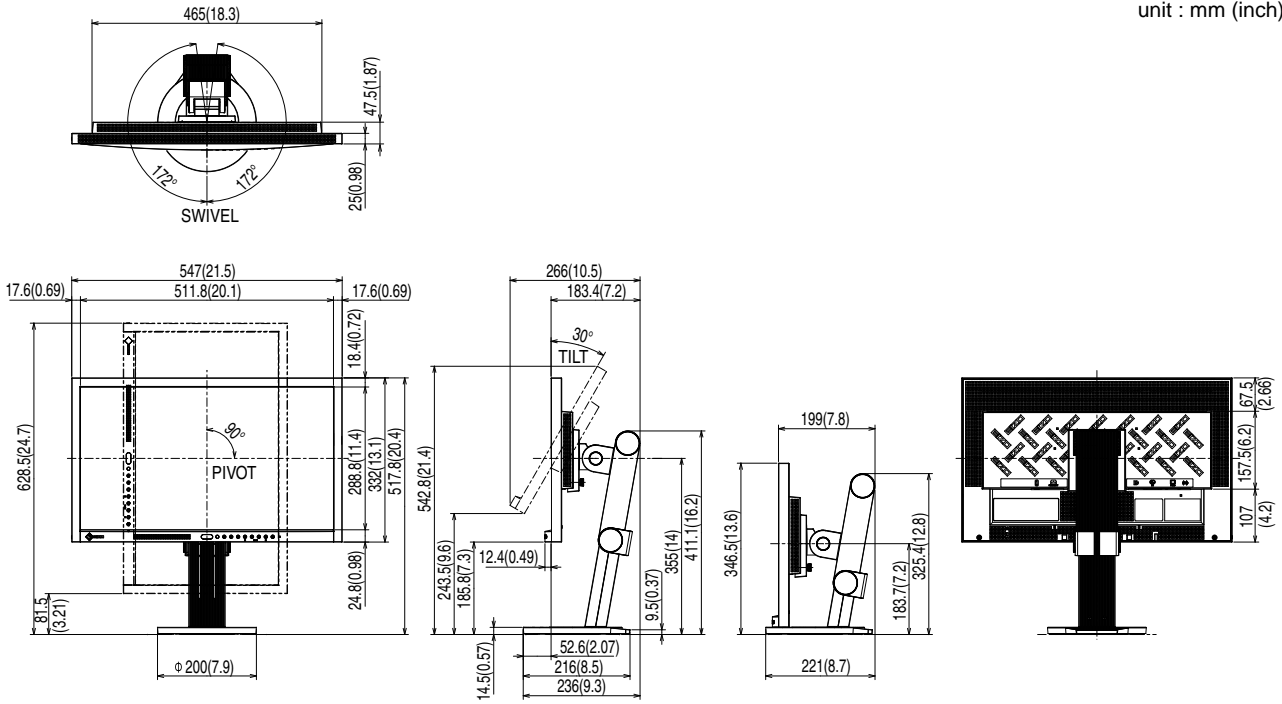


- TriStand

unit : mm (inch)

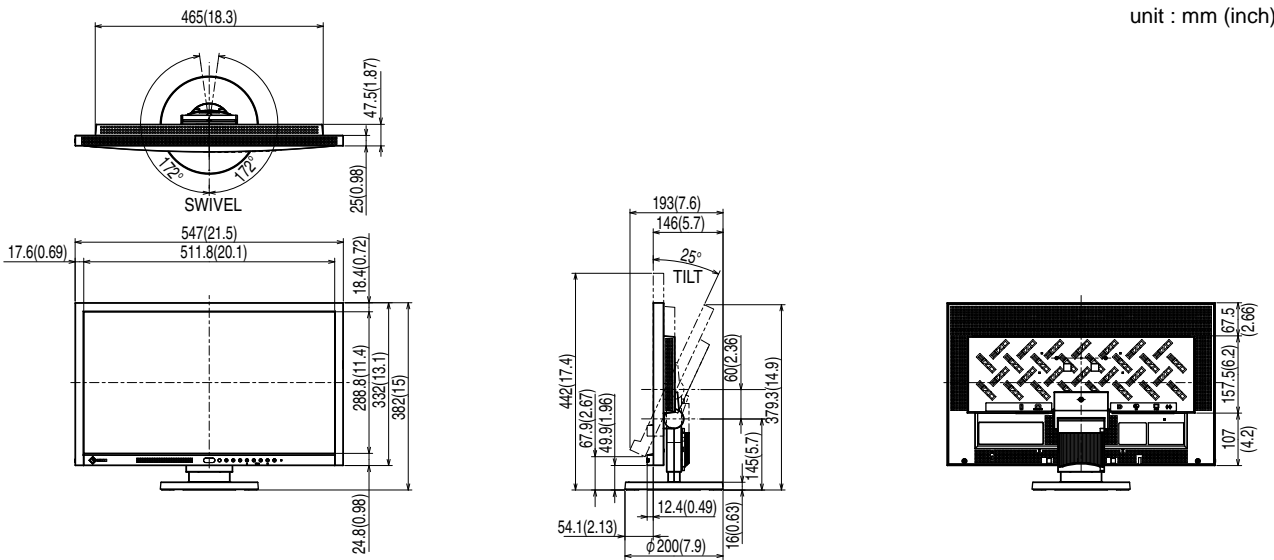

## Connector Pin Assignment


- DVI-D connector

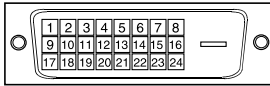

Pin No.	Signal	Pin No.	Signal	Pin No.	Signal
1	T.M.D.S. Data 2-	9	T.M.D.S. Data1-	17	T.M.D.S. Data0-
2	T.M.D.S. Data 2+	10	T.M.D.S. Data1+	18	T.M.D.S. Data0+
3	T.M.D.S. Data2/4 Shield	11	T.M.D.S. Data1/3 Shield	19	T.M.D.S. Data0/5 Shield
4	NC*	12	NC*	20	NC*
5	NC*	13	NC*	21	NC*
6	DDC Clock (SCL)	14	+5V Power	22	T.M.D.S. Clock shield
7	DDC Data (SDA)	15	Ground (return for +5V, Hsync, and Vsync)	23	T.M.D.S. Clock+
8	NC*	16	Hot Plug Detect	24	T.M.D.S. Clock-

(NC\*: No Connection)


- D-Sub mini 15-pin connector

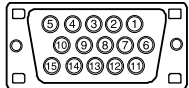

Pin No.	Signal	Pin No.	Signal	Pin No.	Signal
1	Red video	6	Red video ground	11	NC*
2	Green video	7	Green video ground	12	Data (SDA)
3	Blue video	8	Blue video ground	13	H. Sync
4	NC*	9	NC*	14	V. Sync
5	Ground	10	Ground	15	Clock (SCL)

(NC\*: No Connection)

- DisplayPort connector

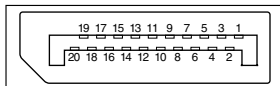

Pin No.	Signal	Pin No.	Signal	Pin No.	Signal
1	ML Lane3-	8	Ground	15	AUX CH+
2	Ground	9	ML Lane1+	16	Ground
3	ML Lane3+	10	ML Lane0-	17	AUX CH-
4	ML Lane2-	11	Ground	18	Hot Plug Detect
5	Ground	12	ML Lane0+	19	Return
6	ML Lane2+	13	CONFIG1	20	DP PWR
7	ML Lane1-	14	CONFIG2		

## Accessories List

Cleaning Kit	EIZO ScreenCleaner
Signal Cable (DisplayPort)	PP200

For the latest information about the accessories, refer to our web site.

<http://www.eizo.com>

## 5-6 Glossary

### Clock

The analog input monitor needs to reproduce a clock of the same frequency as the dot clock of the graphics system in use, when the analog input signal is converted to a digital signal for image display.

This is called clock adjustment. If the clock pulse is not set correctly, some vertical bars appear on the screen.

### DDC/CI (Display Data Channel/Command Interface)

VESA provides the standardization for the interactive communication of the setting information, etc. between a PC and the monitor.

### DisplayPort

VESA provides the digital interface standard for the digital display device. DisplayPort can transfer the video signal up to 16 bits for each channel of RGB, and the audio signal too. (This monitor supports the 8-bit video signal only.)

### DVI (Digital Visual Interface)

DVI is a digital interface standard. DVI allows direct transmission of the PC's digital data without loss.

This adopts the TMDS transmission system and DVI connectors. There are two types of DVI connectors. One is a DVI-D connector for digital signal input only. The other is a DVI-I connector for both digital and analog signal inputs.

### DVI DMPM (DVI Digital Monitor Power Management)

DVI DMPM is a digital interface power-saving function. The "Monitor ON (operating mode)" and "Active Off (power-saving mode)" are indispensable for DVI DMPM as the monitor's power mode.

### Gain

This is used to adjust each color parameter for red, green and blue. An LCD monitor displays the color by the light passing through the panel color filter. Red, green and blue are the three primary colors. All the colors on the screen are displayed by combining these three colors. The color tone can be changed by adjusting the light intensity (volume) passing through each color's filter.

### Gamma

Generally, the monitor brightness varies nonlinearly with the input signal level, which is called "Gamma Characteristic". A small gamma value produces a low-contrast image, while a large gamma value produces a high-contrast image.

### HDCP (High-bandwidth Digital Content Protection)

Digital signal coding system developed to copy-protect the digital contents, such as video, music, etc. This helps to transmit the digital contents safely by coding the digital contents sent via DVI terminal on the output side and decoding them on the input side.

Any digital contents cannot be reproduced if both of the equipments on the output and input sides are not applicable to HDCP system.

### Overdrive

This technology enhances response speed by increasing the potential difference at the time of motion of liquid-crystal pixels, and it is used for liquid-crystal TV sets and others in general. It provides clear-cut three-dimensional display with little image lag, by improving response speed of the intermediate graduation range that frequently appears in moving images.

### Phase

Phase means the sampling timing to convert the analog input signal to a digital signal. Phase adjustment is made to adjust the timing. It is recommended that phase adjustment be made after the clock is adjusted correctly.



**Range Adjustment**

Range adjustment controls the signal output levels to display every color gradation. It is recommended that range adjustment be made before color adjustment.

**Resolution**

The LCD panel consists of numerous pixels of specified size, which are illuminated to form images. This monitor consists of 1920 horizontal pixels and 1080 vertical pixels. At a resolution of  $1920 \times 1080$ , all pixels are illuminated as a full screen (1:1).

**sRGB (Standard RGB)**

International standard for “color reproduction and color space” among peripheral devices (such as monitors, printers, digital cameras, scanners). sRGB allows Internet users to closely match colors as a simple color matching means for the Internet use.

**Temperature**

Color temperature is a method to measure the white color tone, generally indicated in degrees Kelvin. The screen becomes reddish at a low temperature, and bluish at a high temperature, like the flame temperature.

5000K: Slightly reddish white

6500K: Warm white like paper white

9300K: Slightly bluish white

**TMD5 (Transition Minimized Differential Signaling)**

A signal transmission system for digital interface.

**VESA DPM (Video Electronics Standards Association - Display Power Management)**

VESA provides the standardization of signals from PC (graphics board) for power saving of PC monitors. DPM defines the signal status between PC and monitor.

## 5-7 Preset Timing

The following table shows factory preset video timing (for analog signal only).

Mode	Dot clock		Frequency	Polarity
			Horizontal: kHz Vertical: Hz	
VGA 640×480@60Hz	25.2 MHz	Horizontal	31.47	Negative
		Vertical	59.94	Negative
VGA TEXT 720×400@70Hz	28.3 MHz	Horizontal	31.47	Negative
		Vertical	70.09	Positive
VESA 640×480@73Hz	31.5 MHz	Horizontal	37.86	Negative
		Vertical	72.81	Negative
VESA 640×480@75Hz	31.5 MHz	Horizontal	37.50	Negative
		Vertical	75.00	Negative
VESA 800×600@56Hz	36.0 MHz	Horizontal	35.16	Positive
		Vertical	56.25	Positive
VESA 800×600@60Hz	40.0 MHz	Horizontal	37.88	Positive
		Vertical	60.32	Positive
VESA 800×600@72Hz	50.0 MHz	Horizontal	48.08	Positive
		Vertical	72.19	Positive
VESA 800×600@75Hz	49.5 MHz	Horizontal	46.88	Positive
		Vertical	75.00	Positive
VESA 1024×768@60Hz	65.0 MHz	Horizontal	48.36	Negative
		Vertical	60.00	Negative
VESA 1024×768@70Hz	75.0 MHz	Horizontal	56.48	Negative
		Vertical	70.07	Negative
VESA 1024×768@75Hz	78.8 MHz	Horizontal	60.02	Positive
		Vertical	75.03	Positive
VESA 1152×864@75Hz	108.0 MHz	Horizontal	67.50	Positive
		Vertical	75.00	Positive
CEA-861 1280×720@60Hz	74.3 MHz	Horizontal	45.00	Positive
		Vertical	60.00	Positive
VESA 1280×960@60Hz	108.0 MHz	Horizontal	60.00	Positive
		Vertical	60.00	Positive
VESA 1280×1024@60Hz	108.0 MHz	Horizontal	63.98	Positive
		Vertical	60.02	Positive
VESA 1280×1024@75Hz	135.0 MHz	Horizontal	79.98	Positive
		Vertical	75.03	Positive
VESA CVT 1680×1050@60Hz	146.3 MHz	Horizontal	65.29	Negative
		Vertical	59.95	Positive
VESA CVT RB 1680×1050@60Hz	119.0 MHz	Horizontal	64.67	Positive
		Vertical	59.88	Negative
CEA-861 1920×1080@60Hz	148.5 MHz	Horizontal	67.50	Positive
		Vertical	60.00	Positive

### Attention

- Display position may be deviated depending on the PC connected, which may require screen adjustment using Adjustment menu.
- If a signal other than those listed in the table is input, adjust the screen using the Adjustment menu. However, screen display may still be incorrect even after the adjustment.
- When interlace signals are used, the screen cannot be displayed correctly even after screen adjustment using the Adjustment menu.

For U.S.A. , Canada, etc. (rated 100-120 Vac) Only

## FCC Declaration of Conformity

**We, the Responsible Party**

EIZO NANAOTECHNOLOGIES INC.

5710 Warland Drive, Cypress, CA 90630

Phone: (562) 431-5011

**declare that the product**

Trade name: EIZO

Model: FlexScan EV2313W/EV2333W

**is in conformity with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Note

Use the attached specified cable below or EIZO signal cable with this monitor so as to keep interference within the limits of a Class B digital device.

- AC Cord
- Shielded Signal Cable (enclosed)

## Canadian Notice

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### **Hinweise zur Auswahl des richtigen Schwenkarms für Ihren Monitor**

Dieser Monitor ist für Bildschirmarbeitsplätze vorgesehen. Wenn nicht der zum Standardzubehör gehörige Schwenkarm verwendet wird, muss statt dessen ein geeigneter anderer Schwenkarm installiert werden. Bei der Auswahl des Schwenkarms sind die nachstehenden Hinweise zu berücksichtigen:

Der Standfuß muß den nachfolgenden Anforderungen entsprechen:

- a) Der Standfuß muß eine ausreichende mechanische Stabilität zur Aufnahme des Gewichtes vom Bildschirmgerät und des spezifizierten Zubehörs besitzen. Das Gewicht des Bildschirmgerätes und des Zubehörs sind in der zugehörigen Bedienungsanleitung angegeben.
- b) Die Befestigung des Standfusses muß derart erfolgen, daß die oberste Zeile der Bildschirmanzeige nicht höher als die Augenhöhe eines Benutzers in sitzender Position ist.
- c) Im Fall eines stehenden Benutzers muß die Befestigung des Bildschirmgerätes derart erfolgen, daß die Höhe der Bildschirmmitte über dem Boden zwischen 135 – 150 cm beträgt.
- d) Der Standfuß muß die Möglichkeit zur Neigung des Bildschirmgerätes besitzen (max. vorwärts: 5°, min. nach hinten  $\geq 5^\circ$ ).
- e) Der Standfuß muß die Möglichkeit zur Drehung des Bildschirmgerätes besitzen (max.  $\pm 180^\circ$ ). Der maximale Kraftaufwand dafür muß weniger als 100 N betragen.
- f) Der Standfuß muß in der Stellung verharren, in die er manuell bewegt wurde.
- g) Der Glanzgrad des Standfusses muß weniger als 20 Glanzeinheiten betragen (seidenmatt).
- h) Der Standfuß mit Bildschirmgerät muß bei einer Neigung von bis zu 10° aus der normalen aufrechten Position kippstabil sein.

### **Hinweis zur Ergonomie :**

Dieser Monitor erfüllt die Anforderungen an die Ergonomie nach EK1-ITB2000 mit dem Videosignal, 1920 × 1080, Digital Eingang und mindestens 60,0 Hz Bildwiederholfrequenz, non interlaced. Weiterhin wird aus ergonomischen Gründen empfohlen, die Grundfarbe Blau nicht auf dunklem Untergrund zu verwenden (schlechte Erkennbarkeit, Augenbelastung bei zu geringem Zeichenkontrast.)

Übermäßiger Schalldruck von Ohrhörern bzw. Kopfhörern kann einen Hörverlust bewirken.

Eine Einstellung des Equalizers auf Maximalwerte erhöht die Ausgangsspannung am Ohrhörer- bzw. Kopfhörerausgang und damit auch den Schalldruckpegel.

„Maschinenlärminformations-Verordnung 3. GPSGV:

Der höchste Schalldruckpegel beträgt 70 dB(A) oder weniger gemäss EN ISO 7779“

[Begrenzung des maximalen Schalldruckpegels am Ohr]

Bildschirmgeräte: Größte Ausgangsspannung 150 mV

## 关于电子信息产品污染控制标识



本标识根据「电子信息产品污染控制管理办法」，适用于在中华人民共和国销售的电子信息产品。标识中央的数字为环保使用期限的年数。只要您遵守该产品相关的安全及使用注意事项，在自制造日起算的年限内，不会产生对环境污染或人体及财产的影响。上述标识粘贴在机器背面。

## • 有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板	×	○	○	○	○	○
机箱	○	○	○	○	○	○
液晶显示器	×	○	○	○	○	○
其他	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 规定的限量要求以下。  
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 规定的限量要求。  
 （企业可在此处，根据实际情况对上表中打“×”的技术原因进行进一步说明）

## 关于电子信息产品污染控制标识



本标识根据「电子信息产品污染控制管理办法」，适用于在中华人民共和国销售的电子信息产品。标识中央的数字为环保使用期限的年数。只要您遵守该产品相关的安全及使用注意事项，在自制造日起算的年限内，不会产生对环境污染或人体及财产的影响。上述标识粘贴在机器背面。

## • 有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板	×	○	○	○	○	○
机箱	○	○	○	○	○	○
液晶显示器	×	×	○	○	○	○
其他	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 规定的限量要求以下。  
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 规定的限量要求。  
 （企业可在此处，根据实际情况对上表中打“×”的技术原因进行进一步说明）



**EIZO NANO CORPORATION**

153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan  
Phone: +81 76 277 6792 Fax: +81 76 277 6793

**EIZO EUROPE AB**

Lovangsvagen 14 194 61, Upplands Väsby, Sweden  
Phone: +46 8 594 105 00 Fax: +46 8 590 91 575

<http://www.eizo.com>

5th Edition-October, 2010

03V22847E1  
(U.M-EV2333W)