

User's Manual

FlexScan® EV2495


Important

Please read this "User's Manual", and "PRECAUTIONS" (separate volume) carefully to familiarize yourself with safe and effective usage.

- Refer to the "Setup Guide" for information on the installation / connection of the monitor.
- For the latest product information including the "User's Manual", refer to our web site :

www.eizoglobal.com

Location of Caution Statement

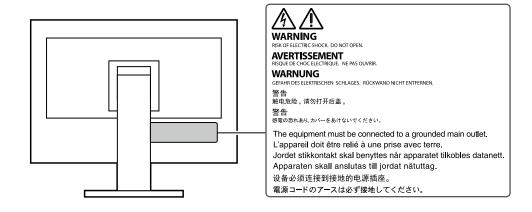

This product has been adjusted specifically for use in the region to which it was originally shipped. If operated outside this region, the product may not perform as stated in the specifications.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of EIZO Corporation. EIZO Corporation is under no obligation to hold any submitted material or information confidential unless prior arrangements are made pursuant to EIZO Corporation's receipt of said information. Although every effort has been made to ensure that this manual provides up-to-date information, please note that EIZO monitor specifications are subject to change without notice.

Notice for this monitor

About the Usage of This Product

This product is suited to general purposes like creating documents, viewing multimedia content (Assuming usage of approximately 12 hours per day).

If using this product for the following kinds of applications, where an extremely high degree of reliability and safety is required, then measures should be in place to maintain safety while using this product.

- Transportation equipment (ships, aircraft, trains, and automobiles)
- Safety devices (Disaster prevention systems, security control systems, etc.)
- · Life-critical devices (medical devices, such as life-support devices and operating room devices)
- · Nuclear energy control devices (Nuclear energy control systems, security control systems of nuclear facilities, etc.)
- Major system communication devices (operation control systems of transportation systems, air traffic control systems, etc.)

This product has been adjusted specifically for use in the region to which it was originally shipped. If the product is used outside the region, it may not operate as specified in the specifications.

This product may not be covered by warranty for uses other than those described in this manual.

The specifications noted in this manual are only applicable when the following are used:

- · Power cords provided with the product
- · Signal cables specified by us

Only use optional products manufactured or specified by us with this product.

About the LCD Panel

It takes about 30 minutes (under our measurement conditions) for the monitor display to stabilize. Please wait 30 minutes or more after the monitor power has been turned on, and then adjust the monitor.

Monitors should be set to a lower brightness to prevent a loss in the screen quality caused by long-term use and to maintain stable use.

When the screen image is changed after displaying the same image for extended periods of time, an afterimage may appear. Use the screen saver or power save function to avoid displaying the same image for extended periods of time. Depending on the image, an afterimage may appear even if it was displayed for a short period of time. To remove such a phenomenon, change the image or keep the power turned off for several hours.

If the monitor displays continuously over a long period of time, dark smudges or burn-in may appear. To maximize the life of the monitor, we recommend the monitor be turned off periodically.

The LCD panel is manufactured using high-precision technology. Although, missing pixels or lit pixels may appear on the LCD panel, this is not a malfunction. Percentage of effective dots: 99.9994 % or higher.

The backlight of the LCD panel has a fixed lifetime. Depending on the usage pattern, such as usage for long continuous periods, the lifespan of the backlight may run out sooner, requiring replacement. When the screen becomes dark or begins to flicker, please contact your local EIZO representative.

Do not press on the LCD panel or edge of the frame strongly, as this may result in display malfunctions, such as interference patterns, etc. If pressure is continuously applied to the LCD panel surface, the liquid crystal may deteriorate or the LCD panel may be damaged. (If the pressure marks remain on the panel, leave the monitor with a black or white screen. The symptom may disappear.)

Do not scratch or press on the LCD panel with any sharp objects, at this may result in damage to the LCD panel. Do not attempt to brush with tissues as this may scratch the panel.

About the Installation

If you place this product on a lacquer-coated desk, the color may adhere to the bottom of the stand due to the composition of the rubber. Check the desk surface before use.

When the monitor is cold and brought into a room or the room temperature goes up quickly, dew condensation may occur on the interior and exterior surfaces of the monitor. In that case, do not turn the monitor on. Instead wait until the dew condensation disappears, otherwise it may cause some damage to the monitor.

About the Maintenance

Periodic cleaning is recommended to keep the monitor looking new and to prolong its operation lifetime (refer to "Cleaning" (page 4)).

Cleaning

The stains on the cabinet and LCD panel surface can be removed by moistening part of a soft cloth with water or by using ScreenCleaner (available as an option).

Attention

- Chemicals such as alcohol and antiseptic solution may cause gloss variation, tarnishing, and fading of the cabinet or LCD panel, and also quality deterioration of the image.
- · Never use thinner, benzine, wax, or abrasive cleaner as they may damage the cabinet or LCD panel surface.

To use the monitor comfortably

- An excessively dark or bright screen may affect your eyes. Adjust the brightness of the monitor according to the environmental conditions.
- · Staring at the monitor for a long time tires your eyes. Take a 10-minute rest every hour.

CONTENTS

Notice for this monitor3						
Cleaning 4						
To use	To use the monitor comfortably4					
CONTEN	ITS5					
Chapter	Chapter 1 Introduction6					
1-1.	Features					
•	Docking Station Function6					
	-					
	Power Delivery 6					
	Daisy Chain Connection 7					
•	High Degree of Flexibility for Installation 7					
	Reduction of Power Consumption 8					
	Realizing More Convenient Operations					
	Using Screen InStyle					
1-2.	Controls and Functions9					
	Front 9					
	Rear					
1-3.	Supported Resolutions11					
1-4.	Changing the Computer Display Settings12					
	Windows 10					
	Windows 8.1					
	macOS					
Chantor	2 Basic Adjustment / Setting 13					
2-1.	Switch Operation Method13					
2-2.	Switching Input Signals14					
2-3.	Switching Display Modes (Color Modes)14					
	Display Modes					
2-4	Conserving Energy15					
2-5.	Adjusting Brightness16					
2-5.						
2-0.	Adjusting Volume16					
	3 Advanced Adjustment / Setting 17					
3-1.	Basic Operation of the Setting Menu17					
3-2.	Setting Menu Functions18					
	Color Adjustment					
	Signal Settings					
	Preference Settings					
	Language					
	4 Administrator Settings25					
-						
4-1.	Basic Operation of the "Administrator Settings" Menu					
4-2.	Functions of the "Administrator					
4-2.	Settings" Menu					
	Zottings monument 20					

Chapt	ter 5 Troubleshooting	29
5-1	. No Picture	29
5-2	. Imaging Problems	30
5-3	. Problems Related to Daisy Chain	
	Connection	31
5-4	Other Problems	32
Chapt	er 6 Attaching/Removing the Stand	33
6-1	. Removing the Stand	33
6-2	. Attaching the Optional Arm	34
6-3	. Attaching the original stand	35
Chapt	er 7 Reference	36
Chapt 7-1		
		36
	Using the Docking Station Function Connection Procedure	 36 36
7-1	Using the Docking Station Function Connection Procedure	36 36
7-1	 Using the Docking Station Function Connection Procedure Connecting Multiple PCs 	36 36
7-1	 Using the Docking Station Function Connection Procedure Connecting Multiple PCs Connection examples Connection Procedure (Using a USB Device from Two PCs by Switching 	36 36 37
7-1	 Using the Docking Station Function Connection Procedure Connecting Multiple PCs Connection examples Connection Procedure (Using a USB Device from Two PCs by Switching between Them) 	36 36 37 37
7-1	 Using the Docking Station Function Connection Procedure Connecting Multiple PCs Connection examples Connection Procedure (Using a USB Device from Two PCs by Switching between Them) 	36 36 37 37
7-1 7-2	 Using the Docking Station Function Connection Procedure Connecting Multiple PCs Connection examples Connection Procedure (Using a USB Device from Two PCs by Switching between Them) 	36 37 37
7-1	 Using the Docking Station Function Connection Procedure Connecting Multiple PCs Connection examples Connection Procedure (Using a USB Device from Two PCs by Switching between Them) Specifications 	36 36 37 37 38 40
7-1 7-2 7-3	 Using the Docking Station Function Connection Procedure Connecting Multiple PCs Connection examples Connection Procedure (Using a USB Device from Two PCs by Switching between Them) Specifications Accessories 	36 37 37 38 40 41


Chapter 1 Introduction

Thank you very much for choosing an EIZO color LCD monitor.

1-1. Features

Docking Station Function


This product is equipped with a LAN port and USB hub so that it can be used as a docking station. By connecting with USB, you can create a stable network environment even on notebook PCs or tablet devices that are not equipped with LAN ports. You can also use USB-compatible peripheral devices and charge smartphones. (page 36)

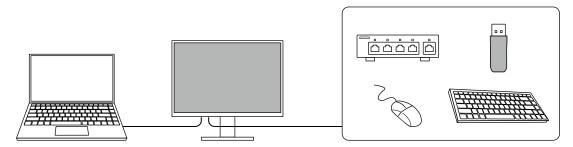

Support for DisplayPort Alt Mode / USB Power Delivery

This product is equipped with a USB Type-C[®] connector and supports video signal transfer (DisplayPort Alt Mode) and USB device charging (USB Power Delivery).

It supplies a maximum of 70 W of power to a connected notebook PC when used as an external monitor.

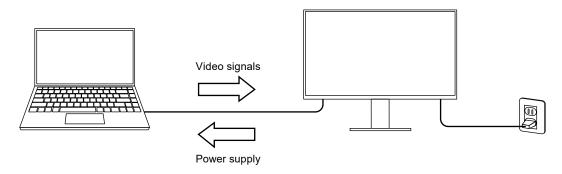


Note

- To use the charging function, the connected device must support device charging by using USB Power Delivery. Charging may not be possible depending on the connected external device.
- Only when the following USB cables are used, a maximum of 70 W of power can be supplied.
 - CC200SS-5A or CC200SSW-5A (Included)
 - CC100 (Separately sold accessory)
- A USB Type-C connector (downstream) supplies a maximum of 15 W of power.
- To display video signals, the connected device must support DisplayPort over USB Type-C (DisplayPort Alt Mode).
- Connected devices can be charged even when the monitor is in power saving mode.
- When "Compatibility Mode" is set to "On" in the "Administrator Settings" menu, connected devices can be charged even when the power of the monitor is turned off.

Daisy Chain Connection

The monitor comes equipped with a USB Type-C output terminal (). When the PC and the monitor are connected by USB Type-C or DisplayPort, the USB Type-C output terminal of the monitor can be used to connect a maximum of 4 monitors in a daisy chain.




Note


- In order to use daisy chain connection, the graphics board of the computer must support Multi-Stream Transport (MST). For details, contact the manufacturer of the computer or the store where you bought the product.
- The number of monitors it is possible to connect varies depending on the monitors you are using and the graphics board of the computer. For details, refer to the compatibility information on our company website.
- When connecting a USB Type-C connector to a DisplayPort connector, use a USB Type-C DisplayPort converter cable.

● High Degree of Flexibility for Installation

• This product can be used as an external monitor of a notebook computer.

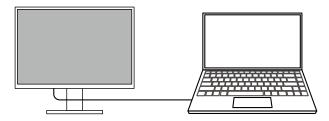


• By attaching the monitor to an arm, the screen can be used in a multi-monitor configuration benefiting from the feature of framelessness on all 4 sides.

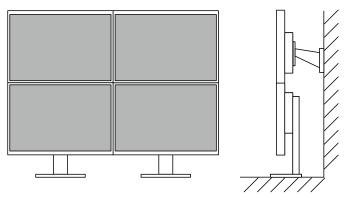

Reduction of Power Consumption

This product provides a function that automatically adjusts the screen brightness to reduce power consumption *1. Power Reduction, CO₂ Reduction, and Eco Performance Level can be checked on the "EcoView Settings" menu. (page 15)

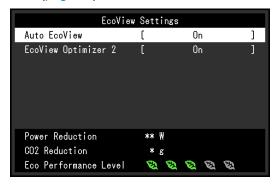

Auto EcoView

The ambient light sensor on the front of the monitor detects the ambient brightness to automatically adjust the screen brightness to a comfortable level.

EcoView Optimizer 2

The monitor automatically adjusts the screen brightness according to the white level of the input signal. This function can reduce power consumption while maintaining the brightness specified by the input signal.

*1 Reference values

Maximum power consumption: 156 W (when a USB device is connected and the speakers are working), standard power consumption: 11 W (brightness 120 cd/m², when no USB device is connected and the speakers are not working, at default settings)

Realizing More Convenient Operations Using Screen InStyle

The "Screen InStyle" monitor control utility enables you to use the monitor more conveniently.


- The monitor color mode can be switched automatically to suit the software to be used.
- · You can switch input signals using the shortcut keys on the keyboard.
- When multiple monitors are installed, you can turn the power on and off or change the color mode of all monitors at the same time.

Note

- Screen InStyle can be downloaded from our web site (www.eizoglobal.com).
- The Windows operating systems are only supported.


1-2. Controls and Functions

Front

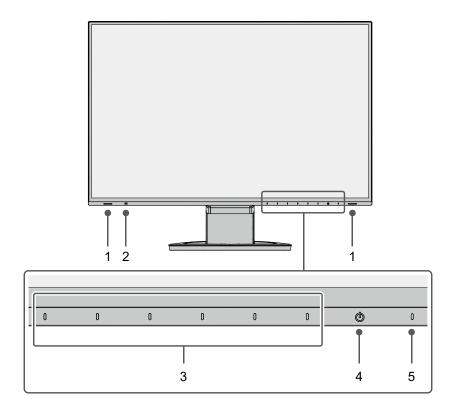

1.	Speakers	Outputs audio.			
2.	Ambient light sensor	Detects ambient brightness. If you use Auto EcoView, the screen brightness is			
		automatically adjusted according to the ambient brightness (page 15).			
3.	Operation switches	Displays menus. Operate the switches according to the operation guide (page 17).			
4.	Power switch	Turns the power on or off.			
5.	Power indicator	Indicates the monitor's operation status.			
		White: Normal operation mode			
		Orange: Power saving mode			
		OFF: Main power / power off			

Rear

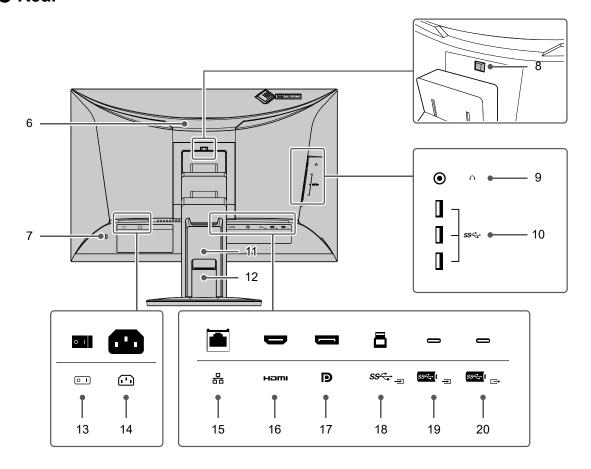

6.	Handle	This handle is used for transportation.
7.	Security lock slot	Complies with Kensington's MicroSaver security system.
8.	Lock button	Use this button to remove the monitor from the stand.
9.	Headphone jack	Connects to headphones.
10.	USB Type-A	Connects to a peripheral USB device (page 36).
	connector	
	(downstream)	
11.	Cable cover	Holds the monitor cables.
12.	Stand*1	Adjusts the height and angle (tilt and swivel) of the monitor.
13.	Main power switch	Turns the main power on or off. │ : On, ○ : Off
14.	Power connector	Connects the power cord.
15.	LAN port (RJ-45)	When using a network connection with the docking station function (page 36),
		this connects to a modem or router with a LAN cable.
16.	HDMI connector	Connects to a PC with HDMI output.
17.	DisplayPort	Connects to a PC with DisplayPort output.
	connector	
18.	USB Type-B	Connect the USB cable when using software that requires USB connection or when
	connector	using the docking station function (page 36).
	(upstream)	
19.	USB Type-C	Connects to a PC with USB Type-C output. This also transmits the USB signal that
	connector	is necessary for using software that requires USB connection or when using the
	(upstream)	docking station function (page 36).
20.	USB Type-C	When connecting in a daisy chain connection, this connects to the USB Type-C
	connector	upstream connectors of the other monitors in the configuration.
	(downstream)	
	<u> </u>	•

^{*1} An optional arm (or optional stand) can be attached by removing the stand section.

1-3. Supported Resolutions

The monitor supports the following resolutions.

Resolution	Vertical scan frequency (Hz)	Scan format	DisplayPort	НОМІ	USB Type-C
640 × 480	59.940	Progressive	√	√	√
640 × 480	60.000	Progressive	√	V	√
720 × 400	70.087	Progressive	√	V	√
720 × 480	59.940	Progressive	V		
720 × 480	59.940	Interlaced	-	V	-
720 × 480	59.941	Progressive	√	V	√
720 × 480	60.000	Progressive	√	V	√
720 × 480	60.000	Interlaced	-	V	-
720 × 576	50.000	Progressive	-	V	-
720 × 576	50.000	Interlaced	-		-
800 × 600	60.317	Progressive	√	V	√
1024 × 768	60.004	Progressive	√	√	√
1280 × 720	50.000	Progressive	-	√	-
1280 × 720	59.940	Progressive	√	V	√
1280 × 720	60.000	Progressive	√	V	√
1280 × 800	59.810	Progressive	√	V	√
1280 × 1024	60.020	Progressive	√	V	V
1600 × 900	60.000	Progressive	$\sqrt{}$	√	√
1600 × 1200	60.000	Progressive		$\sqrt{}$	
1680 × 1050	59.883	Progressive	√	V	√
1680 × 1050	59.954	Progressive	√	V	√
1920 × 1080	50.000	Progressive	-	V	-
1920 × 1080	50.000	Interlaced	-	V	-
1920 × 1080	59.940	Progressive	√	√	√
1920 × 1080	59.940	Interlaced	-,	√ 	-,
1920 × 1080	60.000	Progressive	√	√ 	V
1920 × 1080	60.000	Interlaced	-	<u> </u>	-
1920 × 1200*1	59.950	Progressive	V	V	√ √

^{*1} Recommended resolution

1-4. Changing the Computer Display Settings

If the image is not displayed properly after connecting the monitor to a PC, follow the procedure below to change the display settings on the computer.

Windows 10

- 1. Right-click the mouse anywhere on the desktop except on icons. A menu is displayed.
- 2. From the displayed menu, click "Display Settings". The "Settings" screen is displayed.
- 3. If multiple monitors, including notebook PC screens, are connected to the computer, select "Extend these displays" in the "Multiple displays" menu, and then click "Keep changes" on the confirmation screen. After changing the settings, select a monitor in the "Select and rearrange displays" menu.
- 4. Select the "Make this my main display" option in the "Multiple displays" menu. This enables the monitor to display images properly.
- 5. Confirm that the recommended resolution for the monitor is set in the "Resolution" menu. ("(Recommended)" is displayed after the resolution.)
- 6. To change the size of text and icons, select a magnification in the menu of zoom percentages according to personal preference.
- 7. If a message prompting you to sign out is displayed after changing the settings, sign out and then sign in again.

Windows 8.1

- 1. Click the "Desktop" tile on the Start Screen to display the desktop.
- 2. Right-click the mouse anywhere on the desktop except on icons. A menu is displayed.
- 3. From the displayed menu, click "Screen resolution". The settings screen is displayed.
- 4. If multiple monitors, including notebook PC screens, are connected to the computer, select "Extend these displays" in the "Multiple displays" menu, and then click "Apply". Click "Keep changes" on the confirmation screen.
- 5. Select a monitor in the "Display" menu, and then select the "Make this my main display" option and click "Apply". This enables the monitor to display images properly.
- 6. Confirm that the recommended resolution for the monitor is set in the "Resolution" menu. ("(recommended)" is displayed after the resolution.)
- 7. To change the size of text and icons, click "Make text and other items larger or smaller", select a size according to personal preference on the settings screen, and then click "Apply".
- 8. If a message prompting you to sign out/log off is displayed after changing the settings, sign out/log off and then sign in/log in again.

macOS

- 1. Select "System Preferences" from the Apple menu.
- 2. When the "System Preferences" panel is displayed, click "Displays".
- 3. If multiple monitors, including notebook PC screens, are connected to the computer, make sure that "Mirror Displays" is not selected on the "Arrangement" tab. If it is selected, remove the check mark.
- 4. Select the "Display" tab, and make sure that "Default for display" is selected for "Resolution". If it is not selected, add a check mark. The correct resolution has now been set for your display. Close the "System Preferences" panel. If multiple monitors, including notebook PC screens, are connected to the computer, configure these settings in "Display" on each monitor.
- 5. To select a resolution according to personal preference, select "Scaled" and then select a resolution (either from a list or icons), and then close the panel.

Chapter 2 Basic Adjustment / Setting

This product enables users to change the brightness according to personal preference or to suit the usage environment, and to reduce power consumption to conserve energy.

This chapter describes the basic functions that can be adjusted and set using the switches on the front of the monitor.


For advanced adjustment and setting procedures using the Setting menu, see "Chapter 3 Advanced Adjustment / Setting" (page 17).

2-1. Switch Operation Method

1. Displaying the operation guide

1. Touch any switch (except 也).

The operation guide appears on the screen.

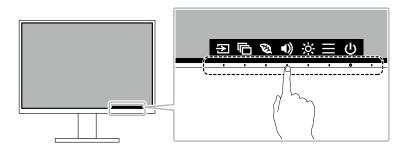

Note

• Do not directly touch the operation guide that appears on the screen. There are switches below the operation guide that can be touched to perform adjustment / setting.

2. Adjusting / setting


- Touch a switch for adjustment / setting.
 The Adjustment / Setting menu appears.
 (A submenu may also be displayed. In this case, select the item for adjustment / setting using v and
- 2. Perform adjustment / setting with the switches and select ✓ to accept the changes.

3. Exiting

1. Select \times to exit the menu.

2-2. Switching Input Signals

When a monitor has multiple signal inputs, the signal to display on-screen can be changed.

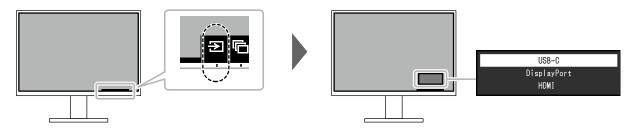


Note

"Screen InStyle" allows you to switch input signals using the shortcut keys on the keyboard.

2-3. Switching Display Modes (Color Modes)

This product is preinstalled with color modes for various display purposes.

By switching the mode according to the purpose and contents of the display, you can display images in an appropriate manner.

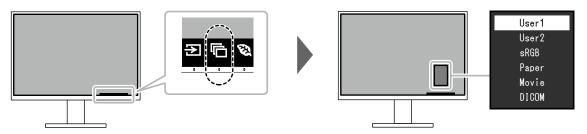

Display Modes


Color Mode	Purpose
User1	Select either of these modes to set a user-defined display mode.
User2	
sRGB	This mode is suitable for matching color reproduction with peripheral devices that support sRGB, such as when printing photos taken using a digital camera.
Paper	This mode uses color tones and contrast similar to that of paper to produce a printed paper effect. It is suitable for displaying images from media such as books and documents.
Movie	This mode displays moving images brightly and with a clear-cut three-dimensional appearance. It is suitable for playing back video content.
DICOM	Select this mode to simply display medical purpose digital images based on DICOM® Part 14.
	• This is not intended to be used for diagnostic purposes.

Note

- "Screen InStyle" allows you to select the color mode automatically according to the software in use.
- In Paper mode, the amount of blue light emitted from the screen is reduced by changing the color tone and controlling the brightness.

2-4. Conserving Energy

This monitor is equipped with EcoView functions to enable users to conserve energy. If you use Auto EcoView, which is one of the EcoView functions, the screen brightness is automatically adjusted according to the ambient brightness.

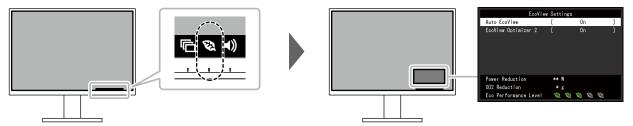

Function	Setting Value	Description
Auto EcoView	On Off	The ambient light sensor on the front of the monitor detects the ambient brightness to automatically adjust the screen brightness to a comfortable level using Auto EcoView. The power consumption of the backlight can be curtailed by adjusting the brightness to an appropriate level. This function can also mitigate eye strain and tiredness caused by a screen that is too bright or too dark. Note Be careful not to block the ambient light sensor on the lower side of the monitor when using Auto EcoView. Even when Auto EcoView is set to "On", you can change the brightness of the monitor using the operation switches () on the front of the monitor or in the color adjustment settings. The manner in which Auto EcoView changes the brightness will also vary depending on the value you set. When "DICOM" is selected for the color mode, the Auto EcoView setting is turned "Off".
EcoView Optimizer 2	On Off	The monitor automatically adjusts the screen brightness according to the white level of the input signal. This function can reduce power consumption while maintaining the brightness specified by the input signal. Note • The setting is turned "Off" in the following cases: - When "Movie" or "DICOM" is selected for the color mode • When set to "On", the appearance of pale colors may change. If this bothers you, set this function to "Off".

Note


- The power saving level (Power Reduction, CO₂ Reduction, and Eco Performance Level) can be checked on the "EcoView Settings" menu. The more indicators that light up representing the Eco Performance Level, the higher the power saving level attained.
 - Power Reduction: the reduction in the backlight's power consumption as a result of the adjusted brightness value.
 - CO₂ Reduction: converted from the "Power Reduction" value, this is an estimate of the quantity of CO₂ emissions reduced when using the monitor for 1 hour.
- The numeric value is a result of calculation based on a default setting (0.000555t-CO2 / kWh) determined by a Japanese ministerial ordinance (2006, Ministry of Economy, Trade and Industry, Ministry of Environment, civil code article 3) and may differ depending on country and year.

2-5. Adjusting Brightness

The brightness of the screen can be adjusted to suit the installation environment or personal preference. The screen brightness is adjusted by changing the brightness of the backlight (light source from the LCD back panel).

Setting Value

0 to 100

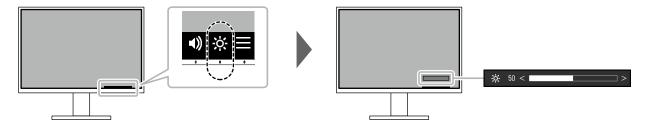


2-6. Adjusting Volume

The volume of the speakers and headphones can be set individually.

Setting Value

0 to 30

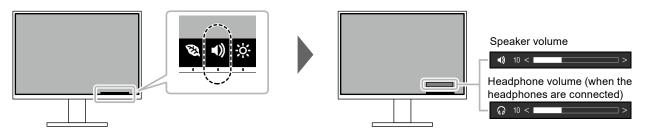

Chapter 3 Advanced Adjustment / Setting

This chapter describes the advanced monitor adjustment and setting procedures using the Setting menu. For basic functions, see "Chapter 2 Basic Adjustment / Setting" (page 13).

3-1. Basic Operation of the Setting Menu

1. Menu display

- 1. Touch any switch (except \circlearrowleft). The operation guide appears.
- Select ■.
 The Setting menu appears.



2. Adjusting / setting





Selecting X during adjustment / setting will cancel the adjustment / setting and restore the state prior to making changes.

3. Exiting

1. Selecting × several times will terminate the Setting menu.

3-2. Setting Menu Functions

Color Adjustment

The color mode settings can be adjusted according to personal preference.



Functions that can be adjusted differ depending on the color mode.

√: Adjustable -: Not adjustable

		Color Mode					
1	Function		sRGB	Paper	Movie	DICOM	
Brightness	3	√	√	√	√	-	
Contrast		√	-	-	√	-	
Temperatu	Temperature		-	√	√	-	
Gamma		√	-	-	-	-	
	Overdrive	√	-	-	-	-	
Settings	Hue	√	-	-	√	-	
	Saturation	√	-	-	√	-	
	Gain	√	-	-	-	-	
Reset		√	√	√	√	-	

Attention


- It takes about 30 minutes for the monitor display to stabilize. Please wait 30 minutes or more after power to the monitor has been turned on before adjusting the monitor.
- The same image may be observed in different colors on multiple monitors due to monitor-specific characteristics. Make fine color adjustments visually when matching colors across multiple monitors. Follow the procedure below to adjust and match colors across multiple monitors.
 - 1. Display a white screen on each monitor.
 - 2. Use one of the monitors as a visual reference point to make adjustments to the "Brightness", "Temperature", and "Gain" of the other monitors.
- When Auto EcoView is set to "On", the same brightness setting is shared by all of the color modes and cannot be set individually for each color mode.

Function	Setting Value	Description
Color Mode	User1 User2 sRGB Paper Movie DICOM	Select the desired mode according to the monitor application. The color mode settings can also be adjusted according to personal preference. Select the mode for adjustment and perform adjustment using the relevant functions. Note • For details on the adjustment status of each mode, see "2-3. Switching Display Modes (Color Modes)" (page 14).
Brightness	0 to 100	The screen brightness is adjusted by changing the brightness of the backlight (light source from the LCD back panel). Note If the image is too dark even when the brightness is set to 100, adjust the contrast.
Contrast	0 to 100	The brightness of the screen is adjusted by varying the video signal level. Note A contrast of 50 displays every color gradation. When adjusting the monitor, it is recommended to perform brightness adjustment, which does not lose gradation characteristics, prior to contrast adjustment. Perform contrast adjustment in the following cases. If the image is too dark even when the brightness is set to 100 (Set the contrast to higher than 50.)
Temperature	Off 4000 K to 10000 K (in increments of 500 K. 9300 K is included.)	Adjust the color temperature. The color temperature is normally used to express the hue of "White" and/or "Black" with a numerical value. The value is expressed in degrees "K" (Kelvin). The screen becomes reddish at low color temperatures and bluish at high color temperatures, similar to the temperatures of a flame. A gain preset value is set for each color temperature setting value. Note The value shown in "K" is available only as a reference. "Gain" allows you to perform more advanced adjustment. If set to "Off", the image is displayed in the preset color of the LCD panel (Gain: 100 for each RGB channel). When the gain is changed, the color temperature setting changes to "Off".
Gamma	1.8 2.0 2.2 2.4	Adjust the gamma. While the brightness of the monitor varies depending on the input signal, the variation rate is not proportional to the input signal. Maintaining the balance between the input signal and brightness of the monitor is referred to as "Gamma correction". Note If "sRGB" is selected for the color mode, "sRGB" is displayed for the gamma value. If "Paper" is selected for the color mode, "Paper" is displayed for the gamma value. If "DICOM" is selected for the color mode, "DICOM" is displayed for the gamma value.

Function		Setting Value	Description
Advanced Settings	Overdrive	Enhanced Standard Off	This function allows you to set the overdrive intensity based on the use of the monitor. Image lag can be reduced by using the "Enhanced" setting when displaying moving images.
			Depending on the display resolution and the setting of "Picture Expansion" (page 21), overdrive may be set to "Off".
	Hue	-50 to 50	Adjust the hue. Note Using this function may prevent some color gradations from being able to be displayed.
	Saturation	-50 to 50	Adjust the color saturation. Note Using this function may prevent some color gradations from being able to be displayed. The minimum value (-50) changes the screen to monochrome.
	Gain	0 to 100	The brightness of each red, green, and blue color component is referred to as "Gain". The hue of "white" can be changed by adjusting the gain. Note Using this function may prevent some color gradations from being able to be displayed. The gain value changes according to the color temperature. When the gain is changed, the color temperature setting changes to "Off".
Reset		-	Reset any color adjustments for the currently selected color mode back to the default settings.

Signal Settings

Set the details regarding input signal, such as the screen display size and color format.

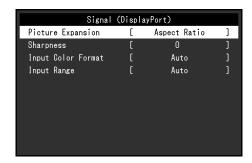


Function	Setting Value	Description
Picture Expansion	Auto *1 Full Screen Aspect Ratio Dot by Dot	 The screen size of the monitor display can be changed. "Auto" The monitor automatically changes the screen size according to the aspect ratio and resolution information from the PC. "Full Screen" Images are stretched to full screen. Since aspect ratios are not maintained, images may be distorted in some cases. "Aspect Ratio" Images are enlarged to full screen without changing the aspect ratio. Since aspect ratios are maintained, blank horizontal or vertical borders may appear. "Dot by Dot" Displays the image at the set resolution or size specified by
		the input signal. Note Example settings - Full Screen - Aspect Ratio Dot by Dot (input signal)
Sharpness	-2 to 2	When a low resolution image is displayed using picture expansion mode ("Full Screen" or "Aspect Ratio"), the text and lines of the image may appear blurry. This blurriness can be reduced by configuring the settings for sharpness. Note • For some resolutions, it is not necessary to configure the settings for sharpness. ("Sharpness" is not a value that can be selected.)

Function	Setting Value	Description
Input Color Format	Auto YUV 4:2:2 *1 YUV 4:4:4 *1 YUV *2 RGB	The color format of the input signal can be specified. Try changing this setting if colors are not displayed correctly.
Input Range	Auto Full Limited	Depending on the video reproduction device, there may be a restriction on black and white video signal levels output to the monitor. This kind of signal is called "Limited range". On the other hand, unlimited signals are called "Full range". • "Auto" Input signal brightness range is automatically judged and is displayed appropriately (recommended setting). Depending on the video reproduction device, Limited range and Full range may not be able to be judged by the monitor. In such a case, selecting "Full" or "Limited" will allow it to be displayed appropriately. • "Full" To be selected in case of Full range signals. Appropriate display can be obtained when this is selected, in case both blacks and whites are corrupted. • "Limited" To be selected in case of Limited range signals. In case this is selected, the output signal range is expanded from 0 to 255 to obtain an appropriate display when black is pale and white is dull. Note • When "YUV" is selected in "Input Color Format", the setting is automatically set to "Limited". Additionally, when "Auto" is
		selected and the monitor determines the input color format to be YUV, the setting is automatically set to "Limited".

^{*1} Only enabled during HDMI input *2 Only valid for DisplayPort or USB Type-C input

Preference Settings

The monitor's settings can be configured to suit the usage environment or personal preference.

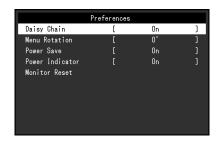

Function	Setting Value	Description
Daisy Chain	On Off	When connecting a daisy chain, set to "On".
		 When set to "On", the communication speed for USB is restricted to USB 2.0. When set to "On", the maximum communication speed for the LAN port is restricted.
Menu Rotation	0° 90° 270°	When the monitor is used in a vertical position, the direction of the Setting menu can also be changed. Note Check whether the cables are connected properly. It is necessary to configure the settings of the computer to use the monitor vertically. For details, refer to our website (www.eizoglobal.com). The menu cannot be rotated 180°. When rotating a monitor 180°, perform
Power Save	On Off	the adjustments / settings for the monitor before rotating it. The monitor can be set to enter power saving mode according to the state of the PC. The monitor changes to power saving mode about 15 seconds after signal input ceases to be detected. When the monitor has shifted to power saving mode, images are not displayed on the screen and audio is not output.
		 How to exit power saving mode Press the operation switches (excluding ひ) on the front of the monitor The monitor automatically exits power saving mode when the monitor receives input Note
		 At the time of shifting to power saving mode, a message that indicates the transition is displayed 5 seconds in advance. When not using the monitor, you can turn off the main power supply or disconnect the power plug so that the power is cut completely. When the monitor is in power saving mode, devices connected to the USB downstream port will still work. Therefore, power consumption of the monitor varies with connected devices even in power saving mode.
Power Indicator	On Off	The power indicator (white) can be turned off in normal operation mode.
Monitor Reset	-	Restore all settings to their default values except for the following settings. • Settings on the "Administrator Settings" menu

Language

The display language for menus and messages can be selected.

Setting Value

English, German, French, Spanish, Italian, Swedish, Japanese, Simplified Chinese, Traditional Chinese




Attention

• The display language of the "Administrator Settings" menu cannot be changed.

Information

You can check the monitor information (model name, serial number (S/N), firmware version, usage time) and the input signal information.

Example:

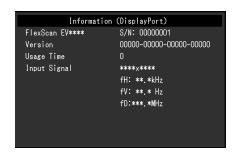


Chapter 4 Administrator Settings

This chapter describes how to configure monitor operation using the "Administrator Settings" menu.


4-1. Basic Operation of the "Administrator Settings" Menu

1. Menu display

- 1. Touch \circlearrowleft to turn off the monitor.
- 2. While touching the leftmost switch, touch \circlearrowleft for more than 2 seconds to turn on the monitor.

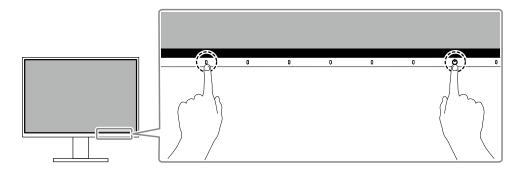


The "Administrator Settings" menu appears.

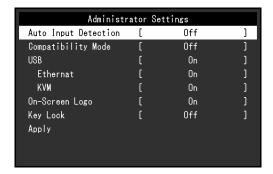

2. Setting

1. Select an item to set with \(\times \) and select \(\subseteq \). The Adjustment / Setting menu appears.



Set with < > and select ✓.
 The "Administrator Settings" menu appears.


3. Applying and exiting

Select "Apply" and then .
 The settings are applied and the "Administrator Settings" menu exits.

Attention

• The language (English) of the "Administrator Settings" menu cannot be changed.

4-2. Functions of the "Administrator Settings" Menu

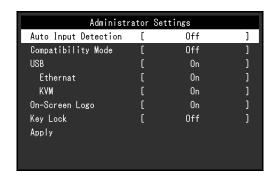

Function	Setting Value	Description
Auto Input Detection	On	This function automatically recognizes the connector through
·	Off	which PC signals are input, and displays images on the screen accordingly. • "On" When the monitor is connected to multiple PCs, if a specific PC enters power saving mode or no signals are input to the monitor, the connector is automatically changed to another one to which signals are input. • "Off" To be set to this when manually selecting input signals. In this case, you can select the input signal to display using the operation switch on the front of the monitor. For details, see "2-2. Switching Input Signals" (page 14).
		Note
		 This product automatically recognizes the connector through which PC signals are input, and displays images on the screen accordingly regardless of whether this function is set to On or Off just after the main power switch on the rear side of the monitor has been turned on. When this function is set to "On", the monitor only enters the power saving mode when signals are not input from any PC.
		When "Daisy Chain" is set to "On" in the "Preferences" menu, this function is automatically set to "Off".
Compatibility Mode	On Off	 If you want to avoid the following phenomena, set this function to "On". The positions of windows and icons are shifted when the monitor is turned off / on or has returned from the power saving mode. Even when the mouse or keyboard are used, the computer does not return from sleep. When the power to the monitor is turned off, a device connected to the USB downstream port does not work, or power is not supplied to the connected device. When the power to the monitor is turned off, power is not supplied to devices connected to the USB Type-C connector. Note When "Daisy Chain" is set to "On" in the "Preferences" menu,
		this function is automatically set to "On".

Function	Setting Value	Description
USB	On	You can switch between enabling and disabling of the USB port of
	Off	the monitor.
		• "On"
		Enables the USB port. If you are using the following functions,
		set this function to "On".
		- Display of video signals using USB Type-C
		- Daisy chain function - Docking station function
		- USB Power Delivery
		- Screen InStyle (monitor control)
		• "Off"
		Disables the USB port so that USB peripheral devices cannot
		be used.
		Note
		By pressing the switch on the far left for three seconds or more
		in the state where the menu is not displayed, you can change
		the setting from "Off" to "On". The same operation cannot be
		used to change from "On" to "Off".
Ethernet	On Off	You can switch between enabling and disabling of the LAN port of
	Oii	the monitor. • "On"
		Enables the LAN port and allows network connections.
		• "Off"
		Disables the LAN port.
		Note
		Network connections that use the LAN port of the monitor are
		enabled for a PC connected to an enabled USB upstream port.
		The PC for which network connection is enabled switches
		depending on the "KVM" setting and the input signal being
		displayed.
KVM	On	When "USB" is set to "Off", this cannot be set. When two PCs are connected to one monitor, you can link the input
	Off	signals with the USB ports to use a USB device connected to the
		monitor from both PCs by switching between them.
		• "On"
		The USB ports are switched automatically when the input
		signals switch.
		It is also possible to connect USB devices such as a mouse or
		keyboard to the monitor and use them from two PCs. The compatibility of input signals and USB ports is as follows.
		HDMI, DisplayPort : USB Type-B (upstream)
		USB Type-C : USB Type-C (upstream)
		• "Off"
		Enables USB Type-C (upstream) regardless of the input signal.
		Note
		When you want to change settings and there is a storage device
		such as USB memory connected to the monitor, change settings
		only after you have removed the storage device. In failing to do
		so, data may be lost or damaged.
		 USB devices connected to the monitor can be used from a PC connected to an enabled USB upstream port.
		Network connections that use the LAN port of the monitor are
		enabled for a PC connected to an enabled USB upstream port.
		When "USB" is set to "Off", this cannot be set.
On-Screen Logo	On	When the monitor is turned on, the EIZO logo appears on the
	Off	screen.
		When this function is set to "Off", the EIZO logo does not appear.

Function	Setting Value	Description
Key Lock	Off	In order to prevent changes to settings, the operation switches on
	Menu	the front of the monitor can be locked.
	All	"Off" (default setting)
		Enables all switches.
		• "Menu"
		Locks the switch.
		• "All"
		Locks all switches except the power switch.

Chapter 5 Troubleshooting

5-1. No Picture

Problem	Possible cause and remedy
No picture Power indicator does not light up.	 Check whether the power cord is connected properly. Turn on the main power switch on the rear side of the monitor. Touch (). Turn off the main power switch on the rear side of the monitor, and then turn it on again a few minutes later.
Power indicator is lighting white.	Increase "Brightness", "Contrast", or "Gain" in the Setting menu (see "Color Adjustment" (page 18)).
Power indicator is lighting orange.	 Switch the input signal. Turn the setting "On" for "Compatibility Mode" on the "Administrator Settings" menu (see "Compatibility Mode" (page 26)). Move the mouse or press any key on the keyboard. Check whether the PC is turned on. Turn off the main power switch on the rear side of the monitor, and then turn it on again.
Power indicator is flashing orange and white.	This symptom may occur when the PC is connected to the DisplayPort connector. Use a signal cable recommended by us for the connection. Turn the monitor off and on. Check the connection and condition of the USB devices connected to the monitor.
2. The message below appears.	This message appears when the signal is not input correctly even though the monitor is functioning properly.
This message appears when no signal is input. Example: DisplayPort No Signal The message shows that the input signal is out of the specified frequency range. Example: DisplayPort Signal Error	 The message shown left may appear, because some PCs do not output the signal immediately after power-on. Check whether the PC is turned on. Check whether the signal cable is connected properly. Switch the input signal. Turn off the main power switch on the rear side of the monitor, and then turn it on again. Check whether the PC is configured to meet the resolution and vertical scan frequency requirements of the monitor (see "1-3. Supported Resolutions" (page 11)). Reboot the PC. Select an appropriate setting using the graphics board's utility. Refer to the User's Manual of the graphics board for details.
This message appears when the PC connected to the USB Type-C connector does not support video signal output. Example: USB-C DP Unsupported	Check whether the connected cable is a signal cable recommended by us. Check whether the USB Type-C of the connected device supports video signal output (DisplayPort Alt Mode). For details, contact the manufacturer of the device. Connect a DisplayPort cable or an HDMI cable.

5-2. Imaging Problems

Problem	Possible cause and remedy
The screen is too bright or too dark. 2. The brightness changes on its	 Use "Brightness" or "Contrast" in the Setting menu to adjust it (see "Color Adjustment" (page 18)). (The LCD monitor backlight has a limited life span. If the screen becomes dark or begins to flicker, contact your local EIZO representative.) If the screen is too bright, try changing the Auto EcoView setting to "On". The monitor detects the ambient brightness to adjust the screen brightness automatically (see "Auto EcoView" (page 15)). Try changing the Auto EcoView setting to "Off" (see "Auto EcoView"
own. 3. Text is blurred.	 (page 15)). Check whether the PC is configured to meet the resolution and vertical scan frequency requirements of the monitor (see "1-3. Supported Resolutions" (page 11)). Try setting the magnification of display on the OS to "100%". When using multiple monitors, try setting the magnification of display to "100%" on all monitors.
4. Afterimages appear.	 Afterimages are particular to LCD monitors. Avoid displaying the same image for a long time. Use the screen saver or power saving function to avoid displaying the same image for extended periods of time. Depending on the image, an afterimage may appear even if it was displayed for a short period of time. To remove such a phenomenon, change the image or keep the power turned off for several hours.
5. Green / red / blue / white / dark dots remain on the screen.	This is due to LCD panel characteristics and not a malfunction.
Interference patterns or pressure marks remain on the LCD panel. Noise appears on the screen.	 Leave the monitor with a white or black screen. The symptom may disappear. In the Setting menu, set "Overdrive" to "Off" (see "Overdrive" (page 20)). When inputting HDCP system signals, normal images may not be displayed immediately.
8. The positions of windows and icons are shifted when the monitor is turned off / on or when restored from power saving mode.	Turn the setting "On" for "Compatibility Mode" on the "Administrator Settings" menu (see "Compatibility Mode" (page 26)).
9. The color shown on the screen is not correct.10. Images are not displayed over the entire area of the screen.	 Try changing "Input Color Format" in the Setting menu (see "Input Color Format" (page 22)). Try changing "Picture Expansion" in the Setting menu (see "Picture Expansion" (page 21)).

5-3. Problems Related to Daisy Chain Connection

Problem	Possible cause and remedy
1. The screen is not displayed.	 For each monitor connected in the daisy chain connection, confirm the following. Check whether "USB-C" or "DisplayPort" is selected for the input signal. For monitors outputting USB Type-C signals, check whether "Daisy Chain" is set to "On" in the "Preferences" menu (refer to "Daisy Chain" (page 23)). Check whether the signal cable is properly connected. When inputting the signal for USB Type-C, connect to when inputting the signal for USB Type-C, connect to when inputting the signal for USB Type-C, connect to when inputting the signal for USB Type-C, connect to when inputting the signal in a daisy chain connection. In order to use daisy chain connection, the graphics board of the computer must support Multi-Stream Transport (MST). For details, contact the manufacturer of the computer or the store where you purchased the product. In order to use daisy chain connection, set "USB" in the "Administrator Settings" menu to "On" (refer to "USB" (page 27)). When using a daisy chain connection with a notebook PC, the screen of the notebook PC may be counted as one of the monitors that are able to be displayed simultaneously by the graphics board. The number of monitors it is possible to connect varies depending on the monitors you are using and the graphics board of the computer. For details, refer to the compatibility information on our company website. Depending on the resolution of the monitor being connected, the screen may not be displayed, the display resolution may be reduced, the refresh rate may be reduced, or other problems may occur due to insufficient bandwidth. For details, refer to the compatibility information on our company website.

5-4. Other Problems

Problem	Possible cause and remedy	
1. The Setting menu does not	Check whether the switch operation lock function is active (see "Key	
appear.	Lock" (page 28)) .	
2. Cannot select items in the Setting menu.	Items that are displayed with gray text cannot be changed.	
3. No audio output.	Check whether volume is set to 0.	
	Check the PC and audio playback software to see whether they are	
	configured correctly.	
4. USB devices connected to the	Check whether the USB cable is correctly connected between the	
monitor do not work / the docking	PC and the monitor.	
station function cannot be used.	Check whether the USB cable is correctly connected between the	
	peripheral and the monitor.	
	Try using a different USB port on the monitor. Try using a different USB port on the DC. Try using a different USB port on the DC.	
	 Try using a different USB port on the PC. Reboot the PC. 	
	When "Compatibility Mode" is set to "Off" in the "Administrator	
	· ·	
	, , , , , , , , , , , , , , , , , , , ,	
	When "USB" is set to "Off" in the "Administrator Settings" menu,	
	peripheral devices connected to the USB port cannot be used. Set	
	"USB" to "On" (refer to "USB" (page 27)).	
	When "Ethernet" is set to "Off" in the "Administrator Settings"	
	· · · · · · · · · · · · · · · · · · ·	
	Settings" menu and the power of the monitor is turned off, devices connected to the USB downstream port are not operational. Change the setting for "Compatibility Mode" to "On" (refer to "Compatibility Mode" (page 26)). • When "USB" is set to "Off" in the "Administrator Settings" menu, peripheral devices connected to the USB port cannot be used. Set "USB" to "On" (refer to "USB" (page 27)).	
	 menu, the LAN port cannot be used. Set "Ethernet" to "On" (refer to "Ethernet" (page 27)). When "KVM" is set to "Off" in the "Administrator Settings" menu, peripheral devices connected to the USB Type-A connector cannot be used. Set "KVM" to "On" (refer to "KVM" (page 27)). When "KVM" is set to "Off" in the "Administrator Settings" menu, the LAN port cannot be used. Set "KVM" to "On". If the peripheral devices work correctly when they are directly connected to the PC, contact your local EIZO representative. Depending on the USB host controller you are using, the connected USB device may not be recognized properly. Update to the latest 	
	 be used. Set "KVM" to "On" (refer to "KVM" (page 27)). When "KVM" is set to "Off" in the "Administrator Settings" menu, the LAN port cannot be used. Set "KVM" to "On". If the peripheral devices work correctly when they are directly connected to the PC, contact your local EIZO representative. Depending on the USB host controller you are using, the connected USB device may not be recognized properly. Update to the latest USB driver provided by the manufacturer, or connect the monitor to 	
	<u>-</u>	
	, , , , , , , , , , , , , , , , , , , ,	
	Check the PC's BIOS setting for USB when using Windows. (Refer	
	<u>'</u>	
5. Power indicator is flashing		
orange and white.		
	Check the connection and condition of the USB devices connected to the manitor.	
	to the monitor. Turn off the main power switch on the rear side of the monitor, and	
	then turn it on again.	
6. Even when the mouse or	Turn the setting "On" for "Compatibility Mode" on the "Administrator	
keyboard are used, the computer	Settings" menu (see "Compatibility Mode" (page 26)).	
does not return from sleep.	Commission (See Company Mode (page 20)).	
7. The PC does not operate with	Check whether the PC has the specifications to operate with a 70 W	
the power supply (USB Power	power supply.	
Delivery) from the monitor.	For a 70 W power supply, use the following USB cables.	
,,	- CC200SS-5A or CC200SSW-5A (Included)	
	- CC100 (Separately sold accessory)	

Chapter 6 Attaching/Removing the Stand

6-1. Removing the Stand

The stand section of this product can be removed.

Attention

- Do not move the stand up and down after removing it. If you move the stand up and down while it is not attached to the monitor, this may cause damage or injury.
- If you drop the monitor or stand, this may cause damage or injury due to the weight of the monitor and stand.

1. Raise the height of the monitor to the maximum height.


Attention

• If the monitor is not raised to the maximum height, there may be cases when the height of the monitor accidentally changes while removing the stand. This may be the cause of injury or damage.

2. Lay the LCD monitor on a soft cloth spread over a stable and flat surface with the LCD panel surface facing down.

3. Remove the stand.

As shown in the diagram, press the lock button (1) while holding firmly onto the support section of the stand, and slide the stand in the direction of the pedestal on the bottom (2). Next, pull the stand upwards to remove it (3).

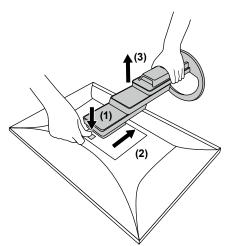


6-2. Attaching the Optional Arm

An optional arm (or an optional stand) can be attached by removing the stand section. Please refer to our web site for the supported optional arm (or optional stand). www.eizoglobal.com

Attention

- · When attaching an arm or stand, follow the instructions of the respective User's Manual.
- When using another manufacturer's arm or stand, confirm the following in advance and select one conforming to the VESA standard. Use the VESA mounting screws supplied with this product when attaching the arm or stand.
 - Clearance between screw holes: 100 mm × 100 mm
 - VESA mount of the arm or stand, external dimensions: 122 mm x 122 mm or less
 - Plate thickness: 2.6 mm
 - Strong enough to support weight of the monitor unit (excluding the stand) and attachments such as cables.
- · When attaching an arm or stand, the installable orientations and movement range (tilt angle) are as follows:

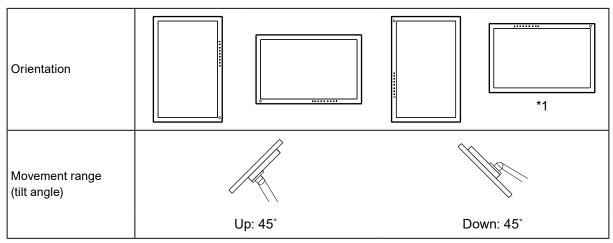

^{*1} If you position the monitor facing in this direction, clean the power connector and the surrounding area regularly. If dust, water, oil, or other materials adhere to the device, it can cause a fire.

- · Connect the cables after attaching an arm or stand.
- Do not move the removed stand up and down. Doing so may result in injury or device damage.
- The monitor, arm, and stand are heavy. Dropping them may result in injury or equipment damage.
- Check periodically that the screws are tight enough. If the screws are not tight enough, the monitor may come unattached. This may be the cause of injury or damage.


1. Attach the arm or stand to the monitor.

Use the VESA mounting screws supplied with this product when attaching the arm or stand.

6-3. Attaching the original stand

- 1. Lay the LCD monitor on a soft cloth spread over a stable and flat surface with the LCD panel surface facing down.
- 2. Remove the fixing screws on the optional arm (or optional stand), and detach the optional arm (or optional stand).
- 3. Attach the original stand.

Insert the four tabs on the stand into the four holes on the back panel (1), and slide the stand towards the upper portion of the monitor (2). The stand clicks when it is attached correctly.

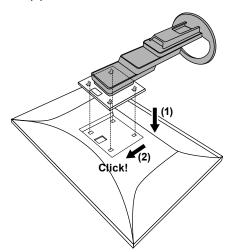

Chapter 7 Reference


7-1. Using the Docking Station Function

This product is equipped with a LAN port and USB hub so that it can be used as a docking station. By connecting with USB, you can create a stable network environment even on notebook PCs or tablet devices that are not equipped with LAN ports. You can also use USB-compatible peripheral devices and charge smartphones.

Connection Procedure


When the PC you are using has a USB Type-C connector

- 1. Connect a USB cable (CC200SS-5A or CC200SSW-5A).
- 2. Connect a LAN cable to the LAN port of the monitor.

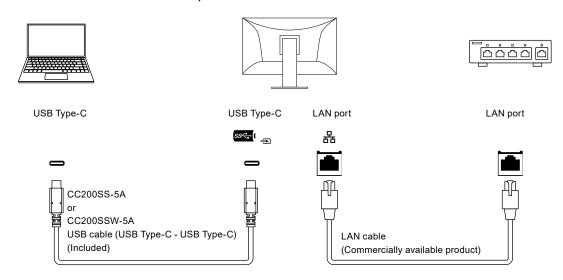

When the PC you are using does not have a USB Type-C connector

- 1. Connect a USB cable.
- 2. Connect a LAN cable to the LAN port of the monitor.

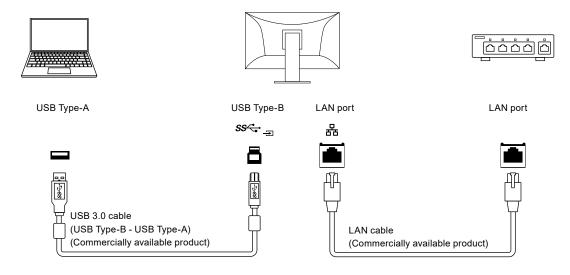

Attention

- When the OS of the PC you are using is Windows 8.1, it is necessary to install the driver to use the LAN port. The
 driver is stored in the monitor. If you connect the PC and the monitor with a USB cable, the installation screen
 appears. Install the driver following the instructions on the screen.
- This function may not work depending on the computer you are using, your OS and your peripheral devices. Contact the manufacturer of each device for information about USB compatibility.
- Even when the monitor is in power saving mode, devices connected to the USB downstream port are operational. Due to this, the power consumption of the monitor varies depending on the connected devices, even in power saving mode.
- When the main power of the monitor is off, a device connected to the USB downstream port will not operate.
- When "Compatibility Mode" (page 26) is set to "Off" and the power of the monitor is turned off, devices connected to the USB downstream port and the LAN port are not operational.


Note

• This product supports USB 3.1 Gen 1. When connecting to peripheral devices that support USB 3.1 Gen 1, high-speed data communication is possible (only if the USB cable connecting the PC or peripheral device supports USB 3.1 Gen 1).

7-2. Connecting Multiple PCs


This product can be connected to multiple PCs and allows you to switch between the connections for display.

Connection examples

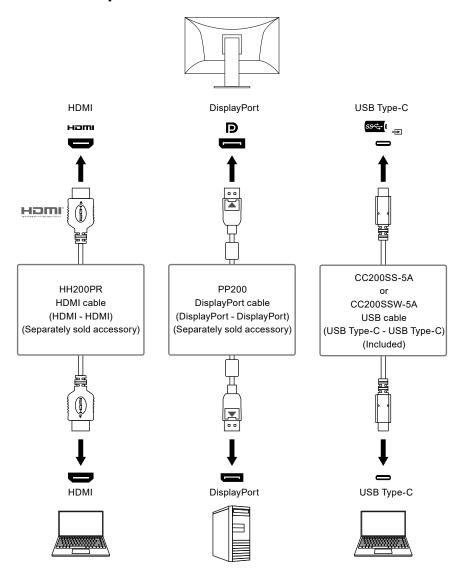

When two PCs are connected to one monitor, you can link the input signals with the USB ports to use a USB device connected to the monitor from both PCs by switching between them. For details, refer to "KVM" (page 27).

Connection Procedure (Using a USB Device from Two PCs by Switching between Them)

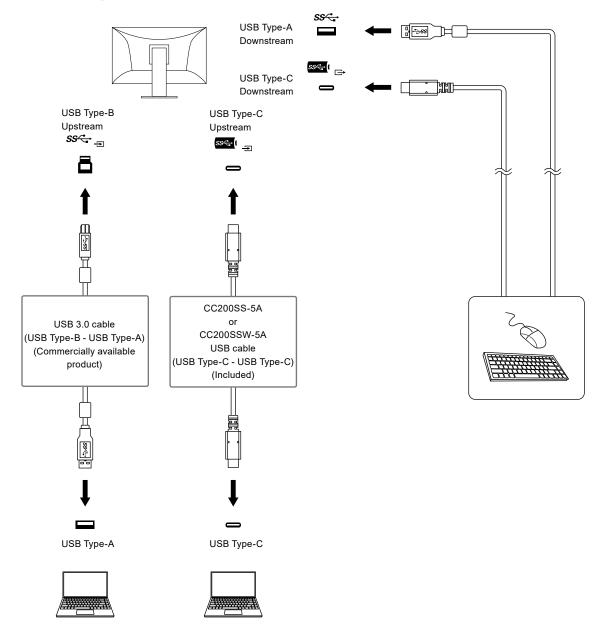

Note

- You can select the input signal to display using the poperation switch on the front of the monitor. For details, see "2-2. Switching Input Signals" (page 14).
- This product provides a function that automatically recognizes the connector through which PC signals are input, and displays images on the screen accordingly. For details, see "Auto Input Detection" (page 26).

7-3. Specifications

LCD Panel	Туре		IPS (Anti-Glare)	
	Backlig	ht	LED	
	Size		61.1 cm (24.1 inch)	
	Resolut	ion	1920 dots × 1200 lines	
Display Size (H × \		Size (H × V)	518.4 mm × 324.0 mm	
	Pixel Pi	tch	0.270 mm	
	Display	Colors	8-bit colors:	16.77 million colors
	Viewing		178° / 178°	
	(H / V, t	-		
	Response Time		Gray-to-gray:	14 ms (overdrive setting: Off)
	(typical)			5 ms (overdrive setting: Enhanced)
Video Signals	Input Te	erminals	DisplayPort (HDCP 1.3 compatible) \times 1, HDMI (HDCP 1.4 compatible) *1 \times 1,	
			USB Type-C (DisplayPort Alt Mode, HDCP 1.3 compatible) × 1	
		Terminal	USB Type-C (DisplayPort Alt Mode,	·
Digital Sc		•	DisplayPort:	31 kHz to 76 kHz /
F	Frequer	ncy		59 Hz to 61 Hz,
	(H / V)		LIDAN	69 Hz to 71 Hz (at 720 × 400)
			HDMI:	15 kHz to 76 kHz /
				59 Hz to 61 Hz, 69 Hz to 71 Hz (at 720 × 400)
			USB Type-C (DisplayPort Alt Mode):	,
			OSB Type-C (Display) Of All Mode).	59 Hz to 61 Hz,
				69 Hz to 71 Hz (at 720 × 400)
	Frame		49.8 Hz to 61 Hz	
	Synchronization			
	Mode			
	Max. Dot Clock		162.0 MHz	
USB	Port Upstr	Upstream	USB Type-C (USB 3.1 Gen 1)*2 × 1 USB Type-B (USB 3.1 Gen 1) × 1	
		Downstroom	USB Type-C (USB 3.1 Gen 1)*3 × 1	
		Downstream	USB Type- A (USB 3.1 Gen 1) × 3	
	Standard	.d	USB Specification Revision 3.1 Gen	1
			5 Gbps (super), 480 Mbps (high), 12 Mbps (full), 1.5 Mbps (low)	
	Communication Speed	Capa (aupar), 100 Mapa (mgm), 12	wispe (ruii), 1.0 wispe (row)	
	Power	Upstream	USB Type-C (USB 3.1 Gen 1):	Maximum 70 W
	Supply	Downstream	USB Type-C (USB 3.1 Gen 1):	Max. 3000 mA / 1 port
			USB Type-A (USB 3.1 Gen 1):	Max. 900 mA / 1 port*4
Audio	Audio Input Format		DisplayPort:	2ch linear PCM (32 kHz / 44.1 kHz /
				48 kHz / 88.2 kHz / 96 kHz /
				176.4 kHz / 192 kHz)
			HDMI:	2ch linear PCM (32 kHz / 44.1 kHz /
				48 kHz / 88.2 kHz / 96 kHz / 176.4 kHz / 192 kHz)
			USB Type-C (DisplayPort Alt Mode):	2ch linear PCM (32 kHz / 44.1 kHz /
			OSB Type-C (Display) Of All Mode).	48 kHz / 88.2 kHz / 96 kHz /
				176.4 kHz / 192 kHz)
	Speakers		1 W + 1 W	
	Headphones		2 mW + 2 mW (32 Ω)	
		erminals	DisplayPort × 1, HDMI × 1, USB Type-C (DisplayPort Alt Mode) × 1 (each	
			shared with video signal)	
	Output	Terminals	Headphone jack × 1	

Supported OS	RJ-45 (USB LAN Adapter)			
macOS Sierra (10.12) or later	Microsoft Windows 10 (32-bit/64-bit)			
Wired LAN				
IEEE802.3 (10BASE-T) Power	macOS Sierra (10.12) or later			
Power				
Maximum Power Consumption 156 W or less 157 W or less				
Consumption Power Save Mode 0.5 W or less (no USB device connected, "USB" in the "Administrator Settings" menu: Off) Standby Mode 0.5 W or less (no USB device connected, default settings) Physical Specifications Dimensions (Tilt: 35°) 531.0 mm × 356.8 mm to 551.8 mm × 230.0 mm to 263.7 mm (W × H × (Tilt: 35°)) Dimensions (Without Stand) Net Weight Net Weight Net Weight (Without Stand) Height Adjustment Power Save Mode 0.5 W or less (no USB device connected, "USB" in the "Administrator Settings" menu: Off) 531.0 mm × 356.8 mm to 551.8 mm × 230.0 mm (W × H × D) (Tilt: 0°) 531.0 mm × 356.2 mm to 538.4 mm × 230.0 mm (W × H × D) (Tilt: 0°) 4 Approx. 7.6 kg Net Weight (Without Stand) Height Adjustment 195.0 mm (Tilt: 35°) / 182.2 mm (Tilt: 0°)				
Settings" menu: Off) Standby Mode 0.5 W or less (no USB device connected, default settings) Physical Specifications Dimensions 531.0 mm × 356.8 mm to 551.8 mm × 230.0 mm to 263.7 mm (W × H × (Tilt: 35°)	156 W or less			
Dimensions Dimensions S31.0 mm × 356.8 mm to 551.8 mm × 230.0 mm to 263.7 mm (W × H × (Tilt: 35°)	,			
Comparisons (Tilt: 35°)	,			
Dimensions (Without Stand) Net Weight Approx. 7.6 kg Net Weight (Without Stand) Height Adjustment 195.0 mm (Tilt: 35°) / 182.2 mm (Tilt: 0°)	D)			
(Without Stand) Net Weight Approx. 7.6 kg Net Weight (Without Stand) Height Adjustment 195.0 mm (Tilt: 35°) / 182.2 mm (Tilt: 0°)				
Net Weight Approx. 7.6 kg Net Weight Approx. 4.9 kg (Without Stand) Height Adjustment 195.0 mm (Tilt: 35°) / 182.2 mm (Tilt: 0°)				
Net Weight (Without Stand) Height Adjustment 195.0 mm (Tilt: 35°) / 182.2 mm (Tilt: 0°)				
(Without Stand) Height Adjustment 195.0 mm (Tilt: 35°) / 182.2 mm (Tilt: 0°)				
Height Adjustment 195.0 mm (Tilt: 35°) / 182.2 mm (Tilt: 0°)				
Tilt Up 35°, down 5°				
Swivel 344°				
Vertical Rotation Left 90°, right 90°				
Operating Temperature 5 °C to 35 °C				
Environmental Humidity 20 % to 80 % R.H. (no condensation)				
Requirements Air Pressure 540 hPa to 1060 hPa				
Transportation / Temperature -20 °C to 60 °C				
Storage Humidity 10 % to 90 % R.H. (no condensation)				
Environmental Requirements Air Pressure 200 hPa to 1060 hPa	200 hPa to 1060 hPa			

^{*1} HDMI CEC (or mutual control) is not supported.

Accessories

For the latest information about accessories, refer to our web site www.eizoglobal.com.

^{*2} Supports Pin Assignment E. Commercially available converter cables (USB Type-C - DisplayPort) can be connected to the DisplayPort connector of the PC.

^{*3} Supports daisy chains with DisplayPort Alt Mode.

^{*4} It is possible to supply power even if the PC and the monitor are not connected by USB.

Appendix

Trademark

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.

The DisplayPort Compliance Logo and VESA are registered trademarks of the Video Electronics Standards Association.

The SuperSpeed USB Trident Logo is a registered trademark of USB Implementers Forum, Inc.



The USB Power Delivery Trident Logos are trademarks of USB Implementers Forum, Inc.



USB Type-C is a registered trademark of USB Implementers Forum, Inc.

DICOM is the registered trademark of the National Electrical Manufacturers Association for its standards publications relating to digital communications of medical information.

Kensington and Microsaver are registered trademarks of ACCO Brands Corporation.

Thunderbolt is a trademark of Intel Corporation in the United States and/or other countries.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and other countries.

Adobe is a registered trademark of Adobe Systems Incorporated in the United States and other countries.

Apple, macOS, Mac OS, OS X, Macintosh and ColorSync are registered trademarks of Apple Inc.

ENERGY STAR is a registered trademark of the United States Environmental Protection Agency in the United States and other countries.

EIZO, the EIZO Logo, ColorEdge, CuratOR, DuraVision, FlexScan, FORIS, RadiCS, RadiForce, RadiNET, Raptor and ScreenManager are registered trademarks of EIZO Corporation in Japan and other countries.

ColorEdge Tablet Controller, ColorNavigator, EcoView NET, EIZO EasyPIX, EIZO Monitor Configurator, EIZO ScreenSlicer, G-Ignition, i•Sound, Quick Color Match, RadiLight, Re/Vue, SafeGuard, Screen Administrator, Screen InStyle, ScreenCleaner and UniColor Pro are trademarks of EIZO Corporation.

All other company names, product names, and logos are trademarks or registered trademarks of their respective companies.

License

The bitmap font used for this product is designed by Ricoh Industrial Solutions Inc.

